

Grizzly *Industrial, Inc.*®

MODEL H8192 1" BELT/8" DISC COMBINATION SANDER OWNER'S MANUAL



COPYRIGHT © AUGUST, 2007 BY GRIZZLY INDUSTRIAL, INC., REVISED MARCH, 2015 (ST)
**WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.**
(FOR MODELS MANUFACTURED SINCE 8/07) #TS9703 PRINTED IN CHINA



WARNING!

This manual provides critical safety instructions on the proper setup, operation, maintenance, and service of this machine/tool. Save this document, refer to it often, and use it to instruct other operators.

Failure to read, understand and follow the instructions in this manual may result in fire or serious personal injury—including amputation, electrocution, or death.

The owner of this machine/tool is solely responsible for its safe use. This responsibility includes but is not limited to proper installation in a safe environment, personnel training and usage authorization, proper inspection and maintenance, manual availability and comprehension, application of safety devices, cutting/sanding/grinding tool integrity, and the usage of personal protective equipment.

The manufacturer will not be held liable for injury or property damage from negligence, improper training, machine modifications or misuse.



WARNING!

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- **Lead from lead-based paints.**
- **Crystalline silica from bricks, cement and other masonry products.**
- **Arsenic and chromium from chemically-treated lumber.**

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: Work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

Table of Contents

- INTRODUCTION..... 2**
 - Foreword 2
 - Contact Info 2
 - Machine Data Sheet..... 3
 - Identification 4

- SECTION 1: SAFETY 5**
 - Safety Instructions for Machinery 5
 - Additional Safety Instructions for Belt and Disc Sanders..... 7

- SECTION 2: CIRCUIT REQUIREMENTS 8**
 - 110V Operation 8

- SECTION 3: SETUP 9**
 - Setup Safety..... 9
 - Items Needed for Setup 9
 - Unpacking 9
 - Inventory..... 10
 - Clean Up 12
 - Site Considerations 12
 - Assembly 13
 - Test Run..... 17
 - Mounting Sander 18
 - Dust Collection 18

- SECTION 4: OPERATIONS 19**
 - Operation Safety 19
 - Disc Sanding 19
 - Belt Sanding..... 20

- SECTION 5: ACCESSORIES 21**

- SECTION 6: MAINTENANCE..... 22**
 - Schedule 22
 - Cleaning 22
 - Lubrication..... 22
 - Sanding Belt Tracking 22
 - Changing the Sanding Belt 23
 - Changing the Sanding Disc..... 23

- SECTION 7: SERVICE 24**
 - Troubleshooting..... 24
 - Squaring the Sanding Disc Table 25
 - Tensioning/Replacing V-Belt..... 25
 - Electrical Components & Wiring Diagram..... 26
 - Sanding Belt & Motor Breakdown 27
 - Sanding Disc Breakdown 28
 - Label Placement..... 30

- WARRANTY AND RETURNS 33**

INTRODUCTION

Foreword

We are proud to offer the Model H8192 1" Belt/8" Disc Combination Sander. This machine is part of a growing Grizzly family of fine woodworking machinery. When used according to the guidelines set forth in this manual, you can expect years of trouble-free, enjoyable operation and proof of Grizzly's commitment to customer satisfaction.

The specifications, drawings, and photographs illustrated in this manual represent the Model H8192 when the manual was prepared. However, owing to Grizzly's policy of continuous improvement, changes may be made at any time with no obligation on the part of Grizzly.

For your convenience, we always keep current Grizzly manuals available on our website at www.grizzly.com. Any updates to your machine will be reflected in these manuals as soon as they are complete. Visit our site often to check for the latest updates to this manual!

Contact Info

If you have any comments regarding this manual, please write to us at the address below:

Grizzly Industrial, Inc.
c/o Technical Documentation Manager
P.O. Box 2069
Bellingham, WA 98227-2069
Email: manuals@grizzly.com

We stand behind our machines. If you have any service questions or parts requests, please call or write us at the location listed below.

Grizzly Industrial, Inc.
1203 Lycoming Mall Circle
Muncy, PA 17756
Phone: (570) 546-9663
Fax: (800) 438-5901
E-Mail: techsupport@grizzly.com
Web Site: <http://www.grizzly.com>





MACHINE DATA SHEET

Customer Service #: (570) 546-9663 • To Order Call: (800) 523-4777 • Fax #: (800) 438-5901

MODEL H8192 1" BELT/8" COMBINATION DISC SANDER

Design Type.....Bench Model

Overall Dimensions:

Height 19½"
 Width 26"
 Depth 14½"
 Shipping Weight 62 lbs.
 Net Weight..... 58.5 lbs.
 Shipping Box Size 21"L x 13"W x 15"H
 Foot Print..... 11" x 18¼"
 Sanding Belt Size 1" x 42"
 Sanding Disc Size 8"
 Dust Ports..... 2"

Motor:

Type.....Capacitor-Start Induction
 Horsepower ⅓ HP
 Voltage / Phase 110V / Single-Phase
 Amps 4A
 Cycle / RPM 60 Hz / 1725 RPM
 Switch Toggle-Type with Safety Disabling Key
 Recommended Circuit Size..... 15A
 Plug Included..... NEMA 5-15
 Power Transfer..... V-Belt (Sanding Belt), Direct Drive (Sanding Disc)
 Bearings Shielded & Permanently Lubricated

Operational Information:

Sanding Belt Speed..... 3000 FPM
 Sanding Disc Speed..... 1725 RPM

Features:

- Dual Cast Iron Tables with Miter Slots
- Tables Tilt to 45°
- Two 2" Dust Ports
- Single Knob Belt Tracking



Identification

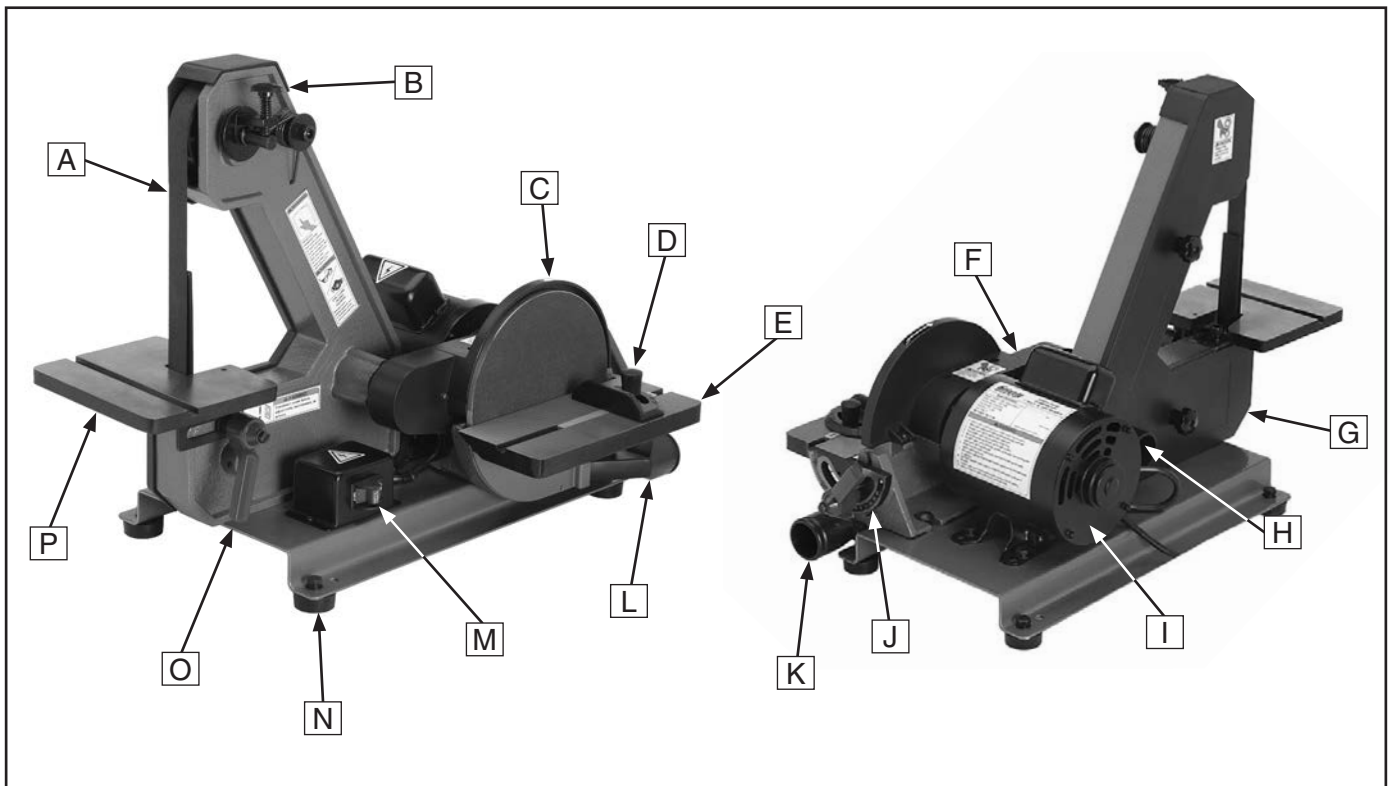


Figure 1. Model H8192 identification.

- A. Sanding Belt 1" x 42"
- B. Sanding Belt Tracking Knob
- C. Sanding Disc 8"
- D. Miter Gauge
- E. Disc Table
- F. V-Belt Safety Cover
- G. Sanding Belt Safety Cover
- H. Sanding Belt Dust Port
- I. Motor
- J. Disc Table Angle Scale
- K. Disc Table Lock Handle
- L. Disc Dust Port
- M. ON/OFF Switch with Disabling Key
- N. Rubber Machine Feet
- O. Sanding Belt Table Lock Handle
- P. Sanding Belt Table



SECTION 1: SAFETY

For Your Own Safety, Read Instruction Manual Before Operating This Machine

The purpose of safety symbols is to attract your attention to possible hazardous conditions. This manual uses a series of symbols and signal words intended to convey the level of importance of the safety messages. The progression of symbols is described below. Remember that safety messages by themselves do not eliminate danger and are not a substitute for proper accident prevention measures. Always use common sense and good judgment.



Indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE

This symbol is used to alert the user to useful information about proper operation of the machine.

Safety Instructions for Machinery

WARNING

OWNER'S MANUAL. Read and understand this owner's manual **BEFORE** using machine.

TRAINED OPERATORS ONLY. Untrained operators have a higher risk of being hurt or killed. Only allow trained/supervised people to use this machine. When machine is not being used, disconnect power, remove switch keys, or lock-out machine to prevent unauthorized use—especially around children. Make workshop kid proof!

DANGEROUS ENVIRONMENTS. Do not use machinery in areas that are wet, cluttered, or have poor lighting. Operating machinery in these areas greatly increases the risk of accidents and injury.

MENTAL ALERTNESS REQUIRED. Full mental alertness is required for safe operation of machinery. Never operate under the influence of drugs or alcohol, when tired, or when distracted.

ELECTRICAL EQUIPMENT INJURY RISKS. You can be shocked, burned, or killed by touching live electrical components or improperly grounded machinery. To reduce this risk, only allow qualified service personnel to do electrical installation or repair work, and always disconnect power before accessing or exposing electrical equipment.

DISCONNECT POWER FIRST. Always disconnect machine from power supply **BEFORE** making adjustments, changing tooling, or servicing machine. This prevents an injury risk from unintended startup or contact with live electrical components.

EYE PROTECTION. Always wear ANSI-approved safety glasses or a face shield when operating or observing machinery to reduce the risk of eye injury or blindness from flying particles. Everyday eyeglasses are **NOT** approved safety glasses.



WARNING

WEARING PROPER APPAREL. Do not wear clothing, apparel or jewelry that can become entangled in moving parts. Always tie back or cover long hair. Wear non-slip footwear to reduce risk of slipping and losing control or accidentally contacting cutting tool or moving parts.

HAZARDOUS DUST. Dust created by machinery operations may cause cancer, birth defects, or long-term respiratory damage. Be aware of dust hazards associated with each workpiece material. Always wear a NIOSH-approved respirator to reduce your risk.

HEARING PROTECTION. Always wear hearing protection when operating or observing loud machinery. Extended exposure to this noise without hearing protection can cause permanent hearing loss.

REMOVE ADJUSTING TOOLS. Tools left on machinery can become dangerous projectiles upon startup. Never leave chuck keys, wrenches, or any other tools on machine. Always verify removal before starting!

USE CORRECT TOOL FOR THE JOB. Only use this tool for its intended purpose—do not force it or an attachment to do a job for which it was not designed. Never make unapproved modifications—modifying tool or using it differently than intended may result in malfunction or mechanical failure that can lead to personal injury or death!

AWKWARD POSITIONS. Keep proper footing and balance at all times when operating machine. Do not overreach! Avoid awkward hand positions that make workpiece control difficult or increase the risk of accidental injury.

CHILDREN & BYSTANDERS. Keep children and bystanders at a safe distance from the work area. Stop using machine if they become a distraction.

GUARDS & COVERS. Guards and covers reduce accidental contact with moving parts or flying debris. Make sure they are properly installed, undamaged, and working correctly **BEFORE** operating machine.

FORCING MACHINERY. Do not force machine. It will do the job safer and better at the rate for which it was designed.

NEVER STAND ON MACHINE. Serious injury may occur if machine is tipped or if the cutting tool is unintentionally contacted.

STABLE MACHINE. Unexpected movement during operation greatly increases risk of injury or loss of control. Before starting, verify machine is stable and mobile base (if used) is locked.

USE RECOMMENDED ACCESSORIES. Consult this owner's manual or the manufacturer for recommended accessories. Using improper accessories will increase the risk of serious injury.

UNATTENDED OPERATION. To reduce the risk of accidental injury, turn machine **OFF** and ensure all moving parts completely stop before walking away. Never leave machine running while unattended.

MAINTAIN WITH CARE. Follow all maintenance instructions and lubrication schedules to keep machine in good working condition. A machine that is improperly maintained could malfunction, leading to serious personal injury or death.

DAMAGED PARTS. Regularly inspect machine for damaged, loose, or mis-adjusted parts—or any condition that could affect safe operation. Immediately repair/replace **BEFORE** operating machine. For your own safety, **DO NOT** operate machine with damaged parts!

MAINTAIN POWER CORDS. When disconnecting cord-connected machines from power, grab and pull the plug—**NOT** the cord. Pulling the cord may damage the wires inside. Do not handle cord/plug with wet hands. Avoid cord damage by keeping it away from heated surfaces, high traffic areas, harsh chemicals, and wet/damp locations.

EXPERIENCING DIFFICULTIES. If at any time you experience difficulties performing the intended operation, stop using the machine! Contact our Technical Support at (570) 546-9663.



Additional Safety for Belt and Disc Sanders

WARNING

Serious injury or death can occur from fingers, clothing, jewelry, or hair getting entangled in rotating disc, belt, spindle or other moving components. Abrasion injuries can occur from touching moving sandpaper with bare skin. Workpieces thrown by sanding surface can strike operator or bystanders with moderate force, causing impact injuries. Long-term respiratory damage can occur from using sander without proper use of a respirator. To reduce the risk of these hazards, operator or bystanders **MUST** completely heed the hazards and warnings below.

SANDPAPER DIRECTION. Feeding workpiece incorrectly can cause it to be thrown from machine, striking operator or bystanders, or causing your hands to slip into the moving sandpaper. To reduce these risks, only sand against direction of sandpaper travel, ensure workpiece is properly supported, and avoid introducing sharp edges into moving sandpaper on the leading side of the workpiece.

HAND PLACEMENT. Rotating sandpaper can remove a large amount of flesh quickly. Always keep hands away from sandpaper during operation. Never touch moving sandpaper on purpose. Use a brush to clean table of sawdust and chips.

FEEDING WORKPIECE. Forcefully jamming workpiece into sanding surface could cause it to be grabbed aggressively, pulling hands into sanding surface. Firmly grasp workpiece in both hands and ease it into sandpaper using light pressure.

AVOIDING ENTANGLEMENT. Becoming entangled in moving parts can cause pinching and crushing injuries. To avoid these hazards, keep all guards in place and closed. **DO NOT** wear loose clothing, gloves, or jewelry, and tie back long hair.

WORKPIECE SUPPORT. Workpiece kickback can occur with violent force if workpiece is not properly supported during operation. Always sand with workpiece firmly against table or another support device.

SANDING DUST. Sanding creates large amounts of dust that can lead to eye injury or respiratory illness. Reduce your risk by always wearing approved eye and respiratory protection when using sander. Never operate without adequate dust collection system in place and running. However, dust collection is not a substitute for

WORKPIECE INSPECTION. Nails, staples, knots, or other imperfections in workpiece can be dislodged and thrown from sander at a high rate of speed at people, or cause damage to sandpaper or sander. Never sand stock that has embedded foreign objects or questionable imperfections.

SANDPAPER CONDITION. Worn or damaged sandpaper can fly apart and throw debris at operator, or aggressively grab workpiece, resulting in subsequent injuries from operator loss of workpiece control. Always inspect sandpaper before operation and replace if worn or damaged.

IN-RUNNING NIP POINTS. The gap between moving sandpaper and fixed table/support creates a pinch point for fingers or workpieces; the larger this gap is, the greater the risk of fingers or workpieces getting caught in it. Minimize this risk by adjusting table/support to no more than $\frac{1}{16}$ " away from sandpaper. For spindle sanders, always use the table insert that fits closest diameter of installed drum.

MINIMUM STOCK DIMENSION. Small workpieces can be aggressively pulled from your hands, causing contact with sanding surface. Always use a jig or other holding device when sanding small workpieces, and keep hands and fingers at least 2" away from sanding surface.

WORKPIECE INTEGRITY. Sanding fragile workpieces can result in loss of control, resulting in abrasion injuries, impact injuries, or damage to sandpaper. Only sand solid workpieces that can withstand power sanding forces. Make sure workpiece shape is properly supported; avoid sanding workpieces without flat bottom surfaces unless some type of jig is used to maintain support and control when sanding force is applied.



SECTION 2: CIRCUIT REQUIREMENTS

110V Operation

!WARNING

Serious personal injury could occur if you connect the machine to the power source before you have completed the set up process. **DO NOT** connect the machine to the power source until instructed to do so.

Amperage Draw

The Model H8192 motor draws the following amps under maximum load:

Motor Draw 4 Amps

Circuit Recommendations

We recommend connecting your machine to a dedicated and grounded circuit that is rated for the amperage given below. Never replace a circuit breaker on an existing circuit with one of higher amperage without consulting a qualified electrician to ensure compliance with wiring codes. **If you are unsure about the wiring codes in your area or you plan to connect your machine to a shared circuit, consult a qualified electrician.**

110V Circuit..... 15 Amps

Plug/Receptacle Type

Included Plug Type..... NEMA 5-15



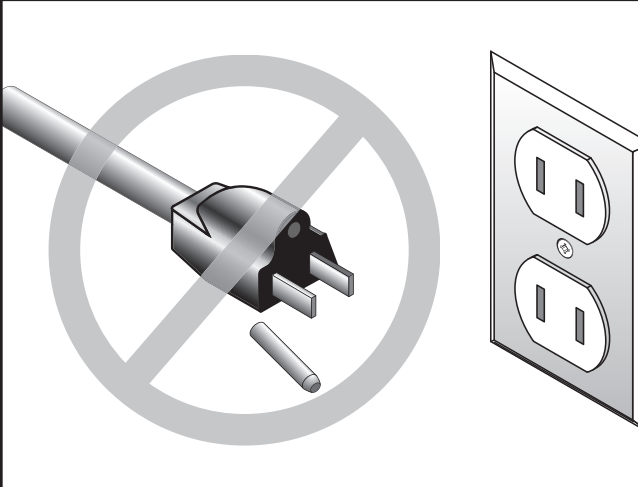


Figure 2. Typical type 5-15 plug and receptacle.



!WARNING

Electrocution or fire could result if this machine is not grounded correctly or if your electrical configuration does not comply with local and state codes. Ensure compliance by checking with a qualified electrician!

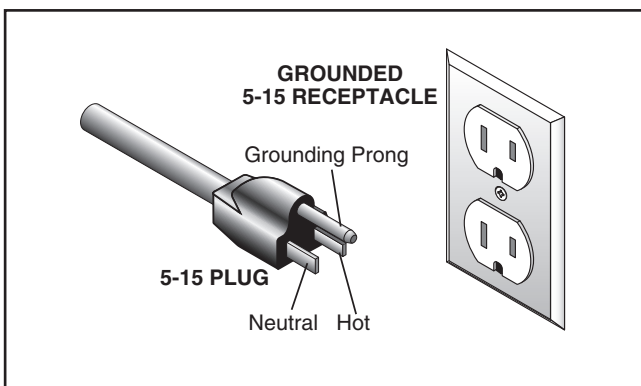

!CAUTION

This machine must have a ground prong in the plug to help ensure that it is grounded. **DO NOT** remove ground prong from plug to fit into a two-pronged outlet! If the plug will not fit the outlet, have the proper outlet installed by a qualified electrician.

Extension Cords


We do not recommend the use of extension cords, but if you find it absolutely necessary:

- Use at least a 16 gauge cord that does not exceed 50 feet in length!
- The extension cord must also contain a ground wire and ground prong.
- A qualified electrician **MUST** size cords over 50 feet long to prevent motor damage.



SECTION 3: SETUP

Setup Safety

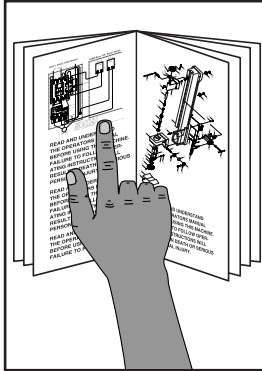

! WARNING
This machine presents serious injury hazards to untrained users. Read through this entire manual to become familiar with the controls and operations before starting the machine!



! WARNING
Wear safety glasses during the entire setup process!

Items Needed for Setup

The following items are needed to complete the setup process, but are not included with your machine:

| Description | Qty |
|--|-----|
| • Safety Glasses (for each person) | 1 |
| • Phillips Head Screwdriver | 1 |
| • Wrench 14mm | 1 |
| • Wrenches 13mm | 2 |
| • Dust Collection System | 1 |
| • 2" Dust Hoses (length as needed) | 2 |
| • 2" Hose Clamps | 2 |

Unpacking

Your machine was carefully packaged for safe transportation. Remove the packaging materials from around your machine and inspect it. If you discover the machine is damaged, *please immediately call Customer Service at (570) 546-9663 for advice.*

Save the containers and all packing materials for possible inspection by the carrier or its agent. *Otherwise, filing a freight claim can be difficult.*

When you are completely satisfied with the condition of your shipment, inventory the contents.



Inventory

The following is a description of the main components shipped with your machine. Lay the components out to inventory them.

Note: *If you can't find an item on this list, check the mounting location on the machine or examine the packaging materials carefully. Occasionally we pre-install certain components for shipping purposes.*

| Inventory: (Figures 3–4) | Qty |
|---------------------------------------|------------|
| A. Motor and Base..... | 1 |
| B. Belt Housing Assembly | 1 |
| C. Belt Table | 1 |
| D. Sandpaper Disc 8" | 1 |
| E. Aluminum Sanding Disc | 1 |
| F. Disc Table | 1 |
| G. V-Belt Safety Cover..... | 1 |
| H. V-Belt Rear Cover | 1 |
| I. Disc Dust Port 2" | 1 |
| J. Table Lock Handles | 2 |
| K. Miter Gauge..... | 1 |
| L. Hex Wrench 2.5mm | 1 |
| M. Hex Wrench 8mm | 1 |
| N. Disc Dust Cover | 1 |

| Hardware (not shown): | Qty |
|--|------------|
| • Disc Table Scale Pointer..... | 1 |
| • Cap Screws M10-1.5 x 20..... | 2 |
| • Flat Washers 10mm | 2 |
| • Lock Washers 10mm | 2 |
| • Phillips Head Screw M6-1 x 12 | 1 |
| • Flat Washer 6mm..... | 1 |
| • Phillips Head Screws M4-.7 x 8 | 5 |
| • Flat Washers 4mm | 5 |
| • Phillips Head Screw M4-.7 x 40 | 1 |
| • Wingnut M4-.7 | 1 |

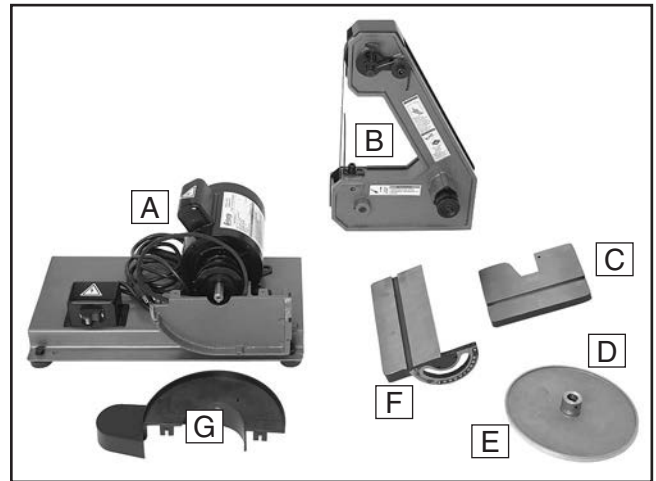


Figure 3. Model H8192 inventory items A–G.

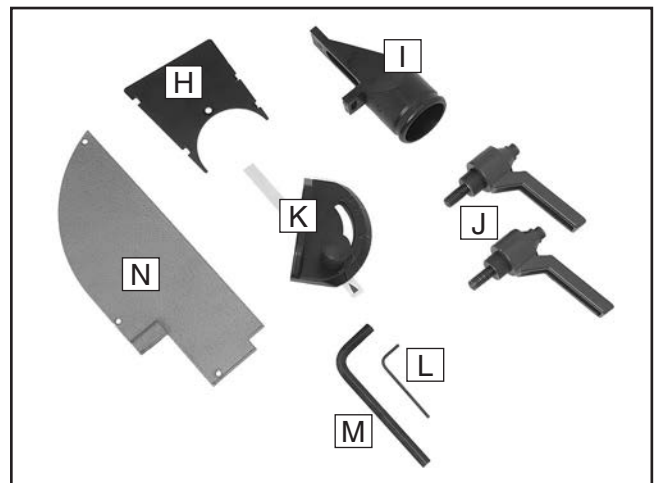


Figure 4. Model H8192 inventory items H–N.

If any nonproprietary parts are missing (e.g. a nut or a washer), we will gladly replace them; or for the sake of expediency, replacements can be obtained at your local hardware store.





Hardware Recognition Chart

USE THIS CHART TO MATCH UP HARDWARE DURING THE ASSEMBLY PROCESS.


MEASURE BOLT DIAMETER BY PLACING INSIDE CIRCLE

- #10
- 1/4"
- 5/16"
- 3/8"
- 7/16"
- 1/2"

- 4mm
- 6mm
- 8mm
- 10mm
- 12mm
- 16mm

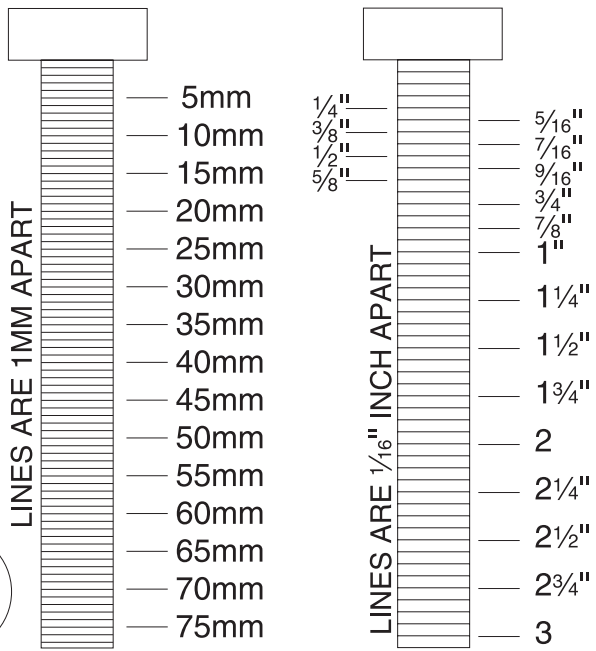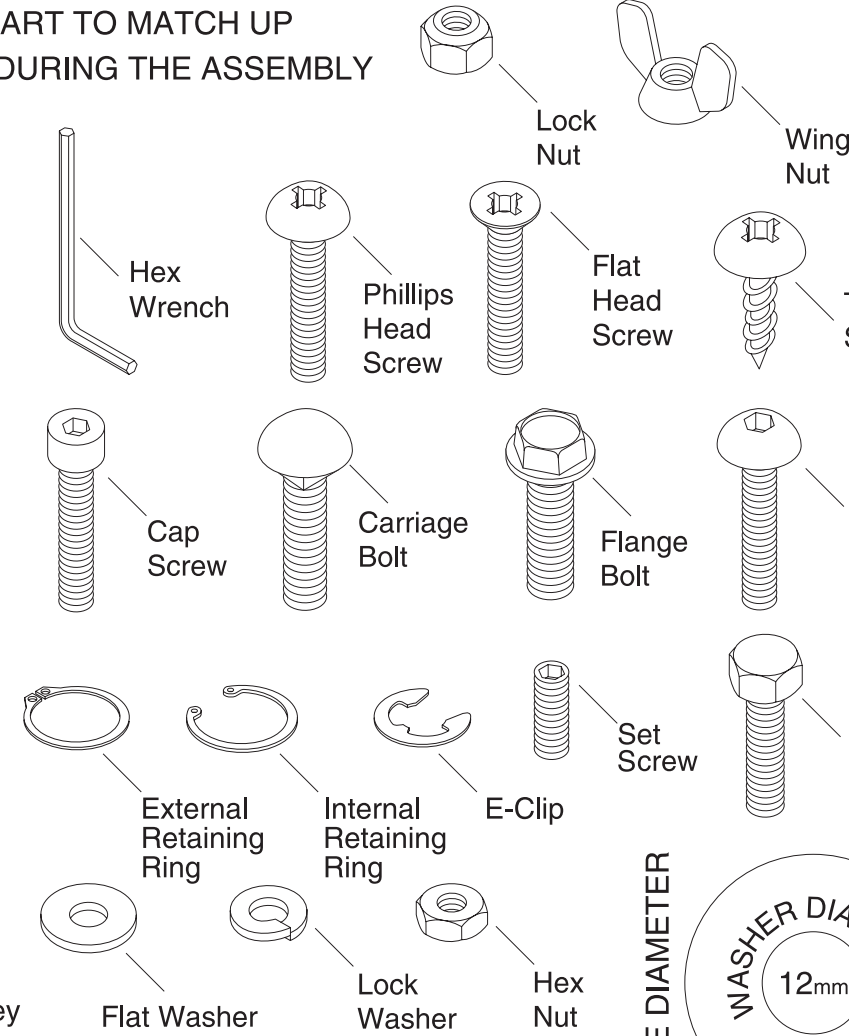


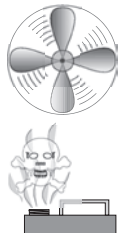
WASHERS ARE MEASURED BY THE INSIDE DIAMETER

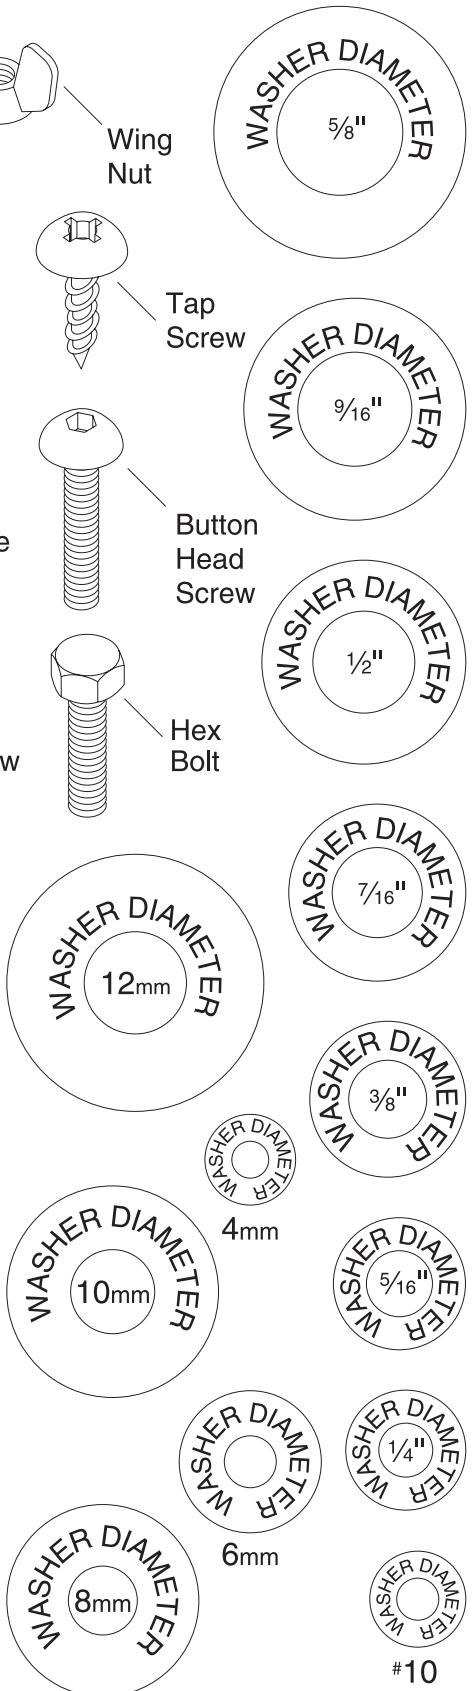

Clean Up

The unpainted surfaces are coated with a waxy oil to prevent corrosion during shipment. Remove this protective coating with a solvent cleaner or citrus-based degreaser such as Grizzly's G7895 Citrus Degreaser. To clean thoroughly, some parts must be removed. **For optimum performance from your machine, clean all moving parts or sliding contact surfaces.** Avoid chlorine-based solvents, such as acetone or brake parts cleaner that may damage painted surfaces. Always follow the manufacturer's instructions when using any type of cleaning product.

| | |
|--|--|
|  | <p>! WARNING Gasoline and petroleum products have low flash points and can explode or cause fire if used to clean machinery. DO NOT use these products to clean the machinery.</p> |
|--|--|

| | |
|---|---|
|  | <p>! CAUTION Many cleaning solvents are toxic if inhaled. Minimize your risk by only using these products in a well ventilated area.</p> |
|---|---|

G7895—Grizzly Citrus Degreaser

This natural, citrus-based degreaser is a great solution for removing export grease, and it's much safer to work around than nasty solvents.

| | |
|--|---|
| <p>Call 1-800-523-4777 To Order</p> |  |
|--|---|

Figure 1. Grizzly citrus degreaser.

Site Considerations

Placement Location

Consider existing and anticipated needs, size of material to be processed through each machine, and space for auxiliary stands, work tables or other machinery when establishing a location for your new combo sander.

We recommend placing the machine at the corner of a benchtop so that both the sanding belt and disc can be accessed without having to move the sander.

See **Figure 5** for the minimum working clearances.



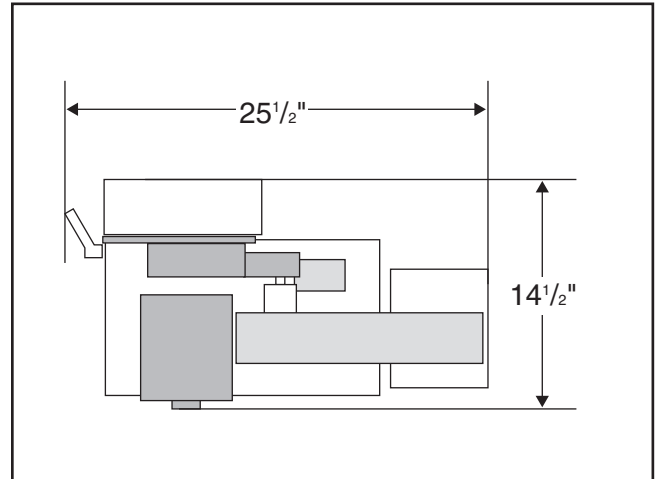


Figure 5. Model H8192 placement dimensions.

| | |
|--|---|
|  | <p>! CAUTION Children and visitors may be seriously injured if unsupervised around this machine. Lock entrances to the shop or disable start switch or power connection to prevent unsupervised use.</p> |
|--|---|

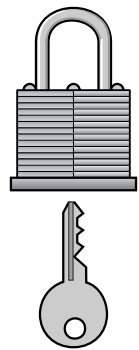

Assembly

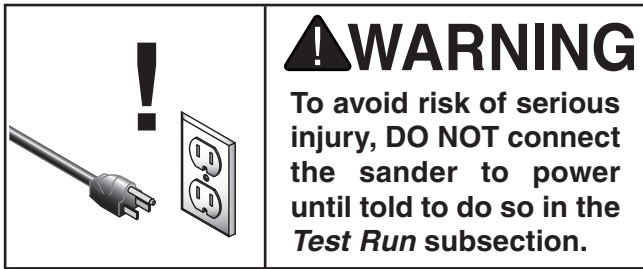

To assemble your combo sander:

1. Using 13mm wrenches, loosen the four motor mount hex bolts (**Figure 6**) so you can adjust the motor position in the next steps.

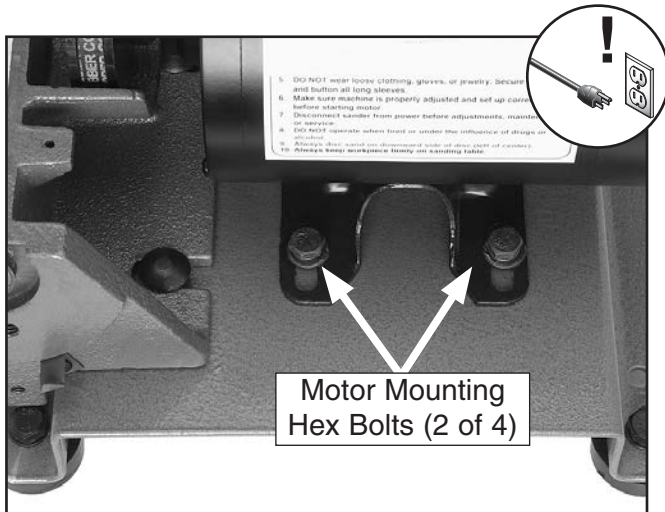


Figure 6. Motor mounting hex bolts (2 of 4, viewed from top).

2. With assistance, position the belt housing assembly on the left side of the base, taking care not to pinch the power cords between the assembly and the base.
3. Place the V-belt around both pulleys, and secure the belt housing assembly with the two M10-1.5 x 20 cap screws, lock washers, and flat washers (see **Figures 7 & 8**)—do not fully tighten the fasteners for now.

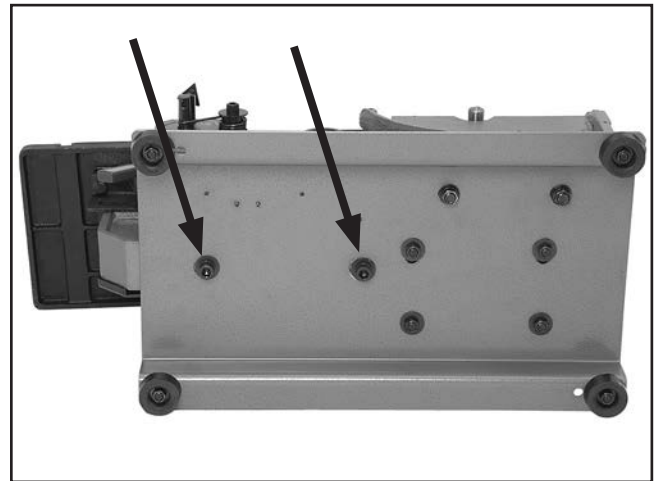


Figure 7. Cap screws securing the belt housing assembly (viewed from underneath the base).

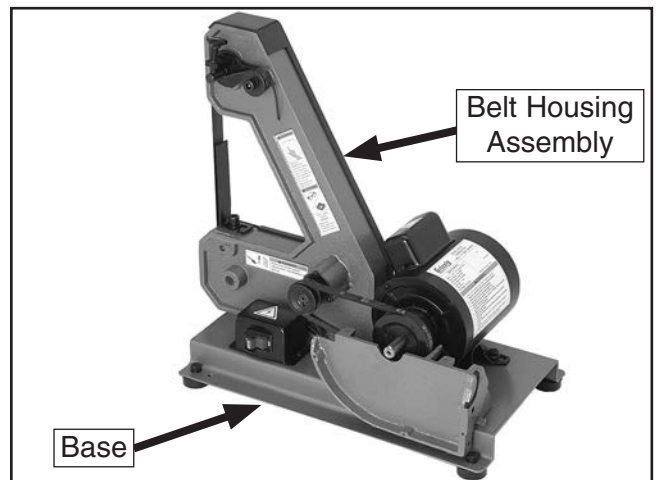


Figure 8. Belt housing assembly installed.

4. Center the motor arbor in the cutout of the cast iron disc guard (see **Figure 9**), then re-tighten the motor mount hex bolts.

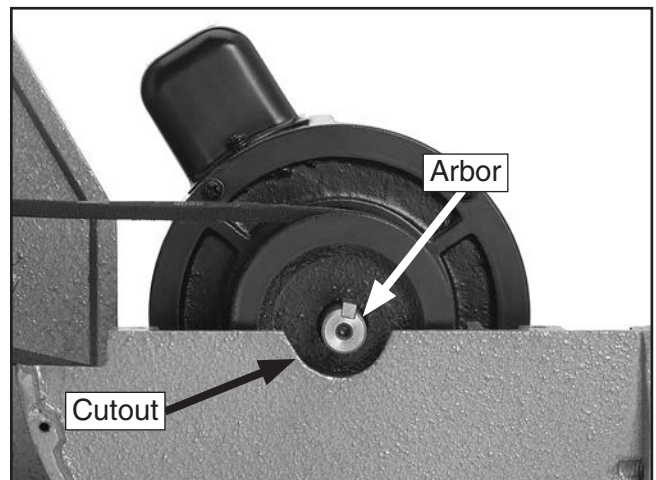


Figure 9. Motor arbor centered.



5. Position the belt housing assembly so there is about $\frac{1}{4}$ " V-belt deflection when moderate pressure is applied to the V-belt between the pulleys (see **Figure 10**)—then fully tighten the cap screws to secure the belt housing assembly in place.

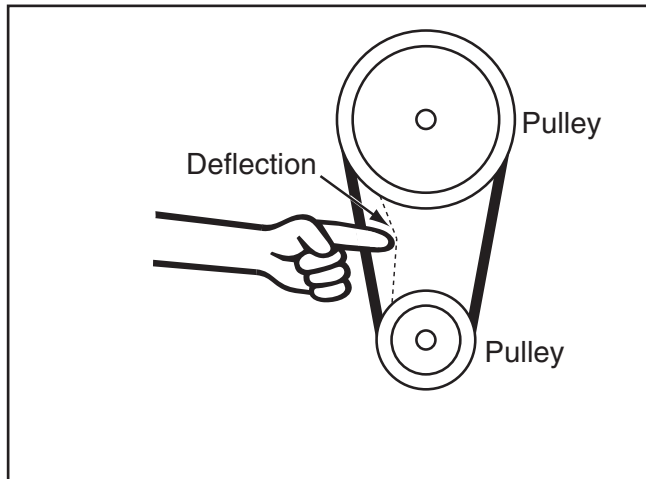


Figure 10. Measuring V-belt deflection.

6. Insert one M4-.7 x 8 Phillips head screw and flat washer into the left inside mounting bracket of the V-belt safety cover (see **Figure 11**). Then hold it in place with a screwdriver as you slide the cover over the V-belt and tighten the fastener into the cast iron disc guard.

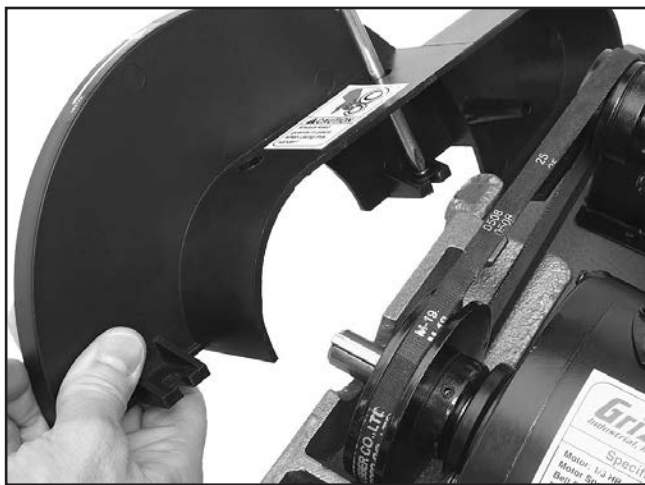


Figure 11. Holding V-belt cover mounting fastener in place.

7. Secure the right side of the V-belt cover with one M4-.7 x 8 Phillips head screw and flat washer.
8. Position the V-belt rear cover, as shown in **Figure 12**, and secure it in place with the M4-.7 x 40 Phillips head screw and wingnut.

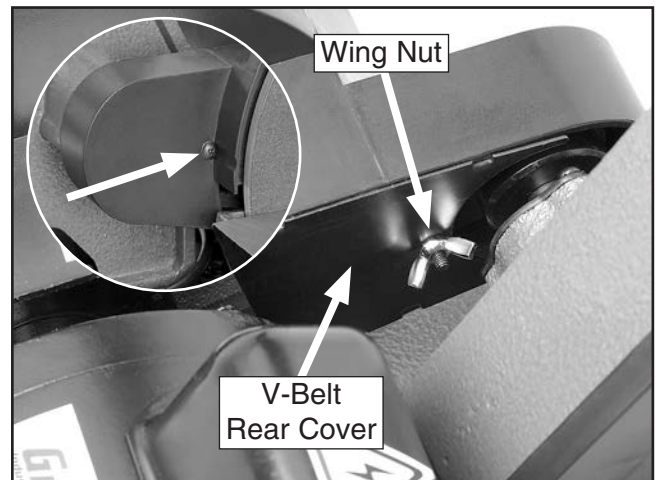


Figure 12. V-belt rear cover installed (inset shows front location of screw).



9. Peel the backing from the 8" sandpaper disc and apply it to the aluminum disc.
10. Slide the aluminum disc onto the motor arbor, making sure to align the arbor key with the disc keyway.
11. Rotate the disc until you can see the set screw through the hole on the back of the V-belt safety cover (see **Figure 13**).



Figure 13. Securing the sanding disc set screw.

12. Using the 2.5mm hex wrench, tighten the set screw to secure the disc to the motor arbor.
13. Install the disc dust cover, as shown in **Figure 14**, with three M4-.7 x 8 Phillips head screws and flat washers.

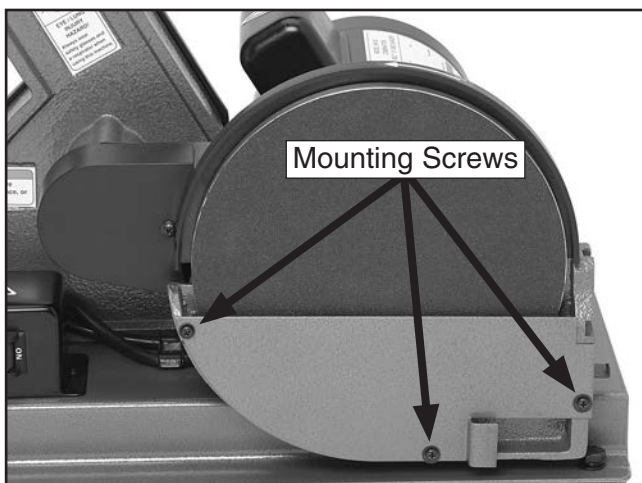


Figure 14. Disc dust cover installed.

14. Lay the sander down on a flat surface, as shown in **Figure 15**, and place a thin piece of cardboard approximately $\frac{1}{16}$ " thick over the sanding disc. This piece of cardboard will act as a spacer when you install the disc table.

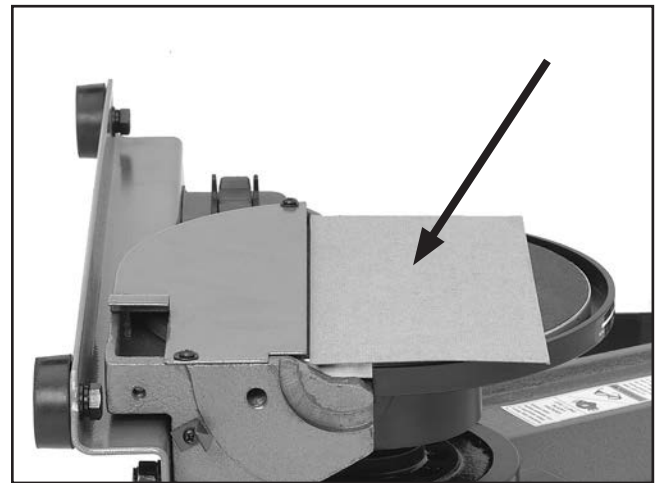


Figure 15. Using thin cardboard (approximately $\frac{1}{16}$ " thick) for table and sanding disc clearance gauge.

15. Keeping the cardboard in place, align the half-arc key of the disc table with the indented keyway on the disc guard (see the inset of **Figure 16**). Then secure the table with a table lock handle, and remove the cardboard.

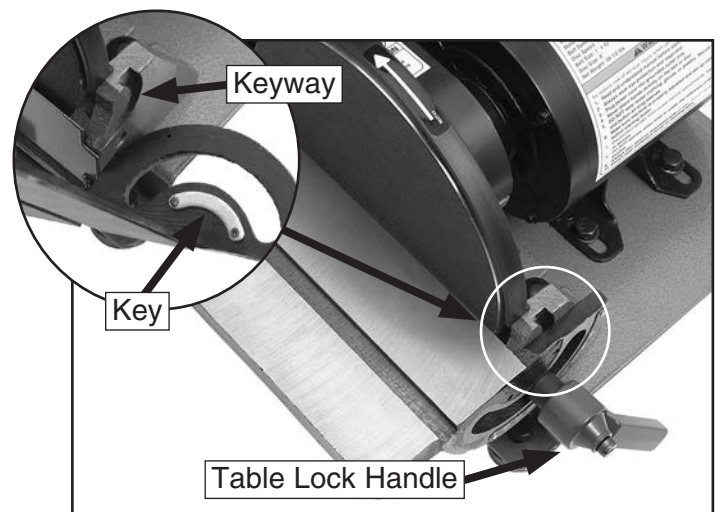


Figure 16. Sanding disc table installed.



16. Secure the dust port, as shown in **Figure 17**, with the M6-1 x 12 Phillips head screw and flatwasher.

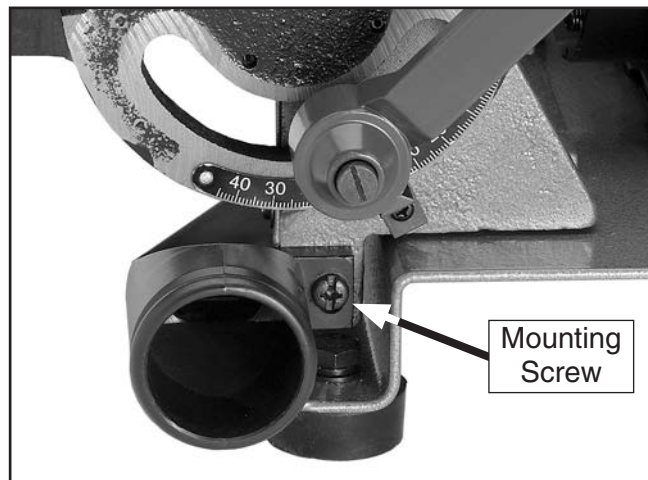


Figure 17. Disc dust port installed.

Note: Make sure the dust port covers the entire opening in the dust cover.

17. Square the disc table to the sanding disc (refer to **Squaring Disc Table** on **Page 25**).
18. Using the Phillips head screw, align the red scale pointer with the "0" mark on the table angle scale (see **Figure 18**).

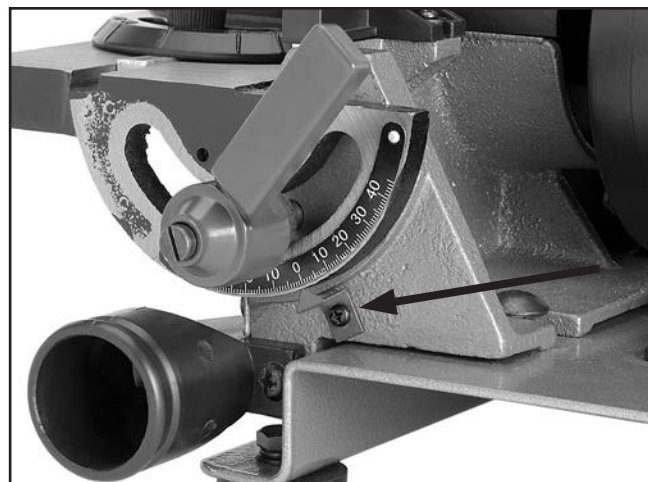


Figure 18. Sanding disc table angle scale pointer installed.

19. Install the belt table with a $\frac{1}{16}$ " clearance from the sanding belt, and secure it in place with the table lock handle (see **Figure 19**).

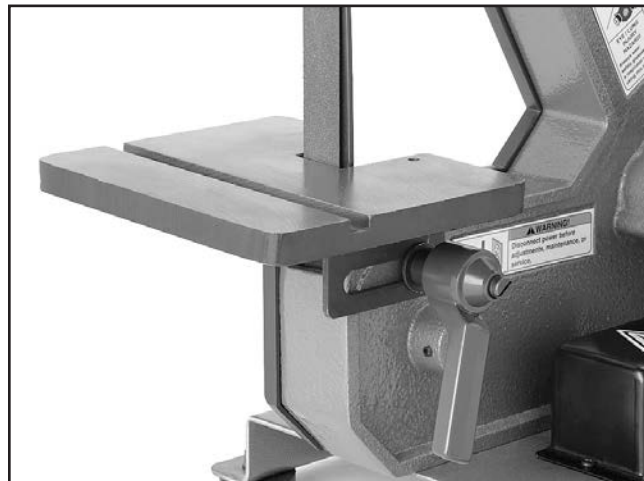


Figure 19. Sanding belt table installed.

20. Loosen the cap screw shown in **Figure 20**, adjust the belt support approximately $\frac{1}{16}$ " away from the sanding belt, then re-tighten the cap screw.

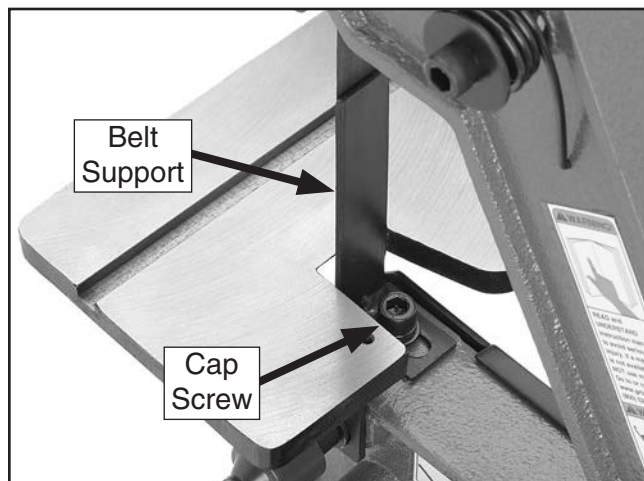


Figure 20. Sanding belt support.



Test Run

Once the assembly is complete, test run your sander to make sure it runs properly and is ready for regular operation.

The test run consists of verifying the following:
1) The motor powers up and runs correctly, and
2) the switch disabling mechanism on the switch works correctly.

If, during the test run, you cannot easily locate the source of an unusual noise or vibration, stop using the machine immediately, then review **Troubleshooting** on **Page 24**.

If you still cannot remedy a problem, contact our Tech Support at (570) 546-9663 for assistance.

To test run the sander:

1. Make sure you have read the safety instructions at the beginning of the manual and that the machine is setup properly.
2. Make sure all tools and objects used during setup are cleared away from the machine.
3. Connect the machine to the power source.
4. Verify that the machine is operating correctly by turning the machine **ON**.

—When operating correctly, the machine runs smoothly with little or no vibration or rubbing noises.

—Investigate and correct strange or unusual noises or vibrations before operating the machine further. Always disconnect the machine from power when investigating or correcting potential problems.

5. Turn the machine **OFF**.
6. Remove the switch disabling key, as shown in **Figure 21**.

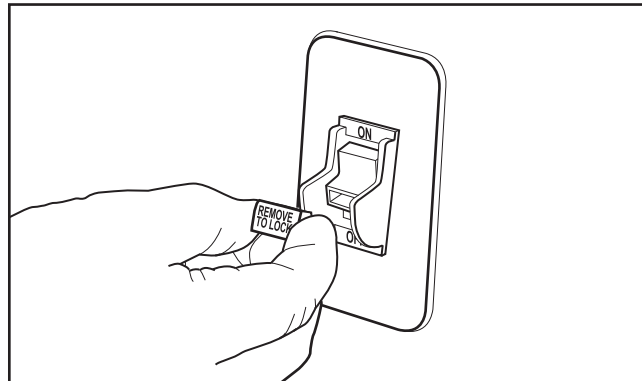


Figure 21. Removing disabling key from the toggle switch.

7. Flip the toggle switch to the **ON** position.
 - If the machine does not start, the switch disabling feature is working as designed.
 - If the machine starts, immediately stop the machine. The switch disabling feature is not working correctly. This safety feature must work properly before proceeding with regular operations. Call Tech Support for help.
8. When the **Test Run** has been successfully completed, check the tracking of the sanding belt and make adjustments if necessary (refer to **Sanding Belt Tracking** on **Page 22**).



Mounting Sander

Once you have confirmed that your machine is running properly, mount it to a workbench.

The strongest mounting option is a "Through Mount" where holes are drilled all the way through the workbench, and hex bolts, washers, and lock nuts are used to secure the sander to the workbench.

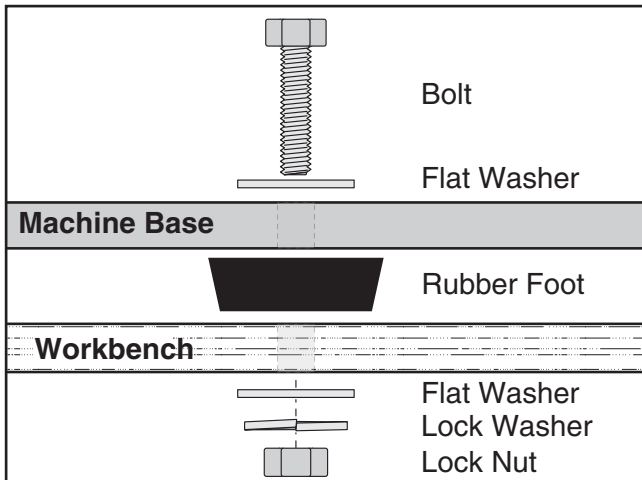


Figure 22. Example of a through mount setup.

Another option for mounting is a "Direct Mount" where the machine is simply secured to the workbench with a lag screw.

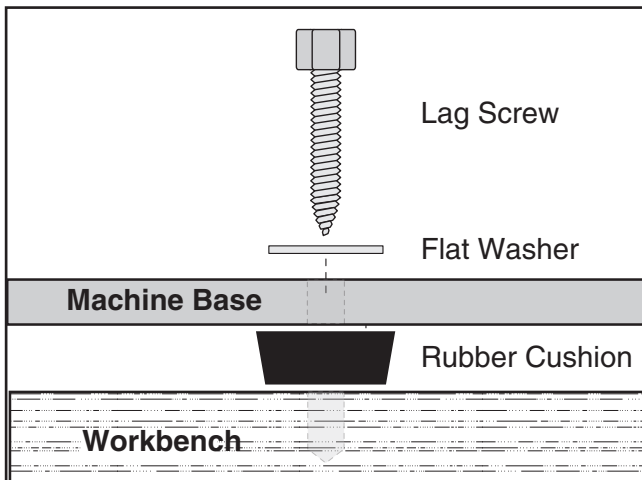


Figure 23. Example of a direct mount setup.

Note: To reduce vibration when operating, keep the rubber cushion included with your sander between the machine base and the workbench.

Dust Collection

⚠ CAUTION

DO NOT operate the Model H8192 without an adequate dust collection system. This sander creates substantial amounts of wood dust while operating. Failure to use a dust collection system can result in short and long-term respiratory illness.

Recommended CFM at EACH Dust Port: 100 CFM

Do not confuse this CFM recommendation with the rating of the dust collector. To determine the CFM at the dust port, you must consider these variables: (1) CFM rating of the dust collector, (2) hose type and length between the dust collector and the machine, (3) number of branches or wyes, and (4) amount of other open lines throughout the system. Explaining how to calculate these variables is beyond the scope of this manual. Consult an expert or purchase a good dust collection "how-to" book.

To connect a dust collection hose:

1. Fit a 2" dust hose from the dust collection system over each dust port, and secure them in place with a 2" hose clamp.
2. Tug the hoses to make sure they do not come off.

Note: A tight fit is necessary for proper performance.



SECTION 4: OPERATIONS

Operation Safety


!WARNING

Damage to your eyes and lungs could result from using this machine without proper protective gear. Always wear safety glasses and a respirator when operating this machine.



!WARNING

Loose hair and clothing could get caught in machinery and cause serious personal injury. Keep loose clothing and long hair away from moving machinery.

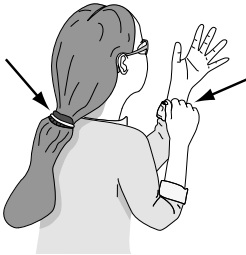

NOTICE

If you have never used this type of machine or equipment before, **WE STRONGLY RECOMMEND** that you read books, trade magazines, or get formal training before beginning any projects. Regardless of the content in this section, Grizzly Industrial will not be held liable for accidents caused by lack of training.

Disc Sanding

!CAUTION

Always keep the workpiece on the left side of the wheel that rotates down toward the table. This will keep the workpiece from flying out of your hands due to kickback.

To use the sanding disc:

1. DISCONNECT THE SANDER FROM POWER!
2. Adjust the angles of the disc sanding table and the miter gauge for your operation.
3. Connect the sander to power, turn it **ON**, and allow it to reach full speed.
4. Place the workpiece on the table and firmly against the miter gauge.

Continued on next page →



5. Slowly, and with light pressure, move the workpiece into the left side of the sanding disc. See **Figures 24–26** for examples of disc sanding.

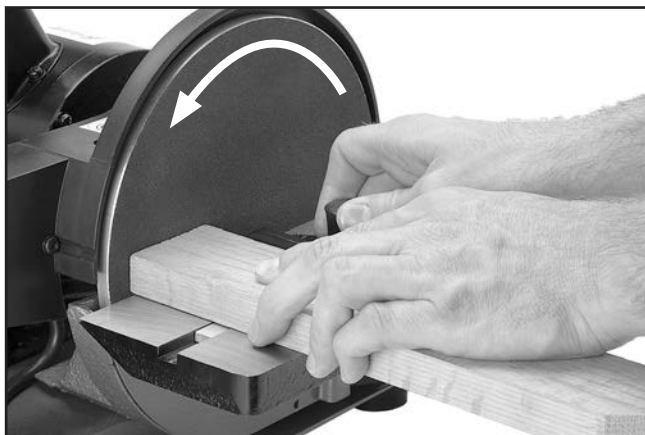


Figure 24. Example of 90° disc sanding.



Figure 25. Example of miter sanding.



Figure 26. Example of angle sanding.

Note: To prevent burning the workpiece and overloading the sanding disc, move the workpiece slowly back and forth from the left side of the sanding disc to the center.

Belt Sanding

Use the sanding belt for the long, flat surfaces of the workpiece.

⚠ CAUTION

To avoid the risk of kickback and personal injury, always keep the workpiece firmly on the table, and never sand the short side of the workpiece with the sanding belt.

To use the sanding belt:

1. DISCONNECT THE SANDER FROM POWER!
2. Using a protractor or other angle measuring tool, set the correct angle of the sanding belt table for your operation.
3. Connect the sander to power, turn it **ON**, and allow it to reach full speed.
4. Place the workpiece on the sanding belt table, then slowly, and with light pressure, move the workpiece into the sanding belt.

Note: Hold the workpiece firmly on the table, but keep your fingers away from the sanding surface, as shown in **Figure 27**.



Figure 27. Example of belt sanding.



SECTION 5: ACCESSORIES

- T20501—Face Shield Crown Protector 4"
- T20502—Face Shield Crown Protector 7"
- T20503—Face Shield Window
- T20452—"Kirova" Anti-Reflective S. Glasses
- T20451—"Kirova" Clear Safety Glasses
- H0736—Shop Fox® Safety Glasses
- H7194—Bifocal Safety Glasses 1.5
- H7195—Bifocal Safety Glasses 2.0
- H7196—Bifocal Safety Glasses 2.5



Figure 78. Eye protection assortment.

PRO-STICK® Abrasive Surface Cleaners

Extend the life of your sanding discs and belts! Choose the Pro-Stick® with a handle for greater control or without a handle for more usable area.

| <u>Size</u> | <u>Model</u> |
|---------------------------------|--------------|
| 1½" X 1½" X 8½" | G1511 |
| 2" X 2" X 12"..... | G1512 |
| 1½" X 1½" X 9" with Handle..... | G2519 |
| 2" X 2" X 11" with Handle..... | G2520 |



Figure 29. PRO-STICK® abrasive cleaners.

Model H8192 (Mfg. Since 8/07)

- H2499—Small Half-Mask Respirator
 - H3631—Medium Half-Mask Respirator
 - H3632—Large Half-Mask Respirator
 - H3635—Disposable Cartridge Filter Pair P100
- Wood dust is now considered a known carcinogen and has been linked to nasal cancer and severe respiratory illnesses. If you work around dust everyday, a half-mask respirator can be a lifesaver. Also compatible with safety glasses!



Figure 30. Half-mask respirator and disposable cartridge filters.

1" x 42" Aluminum Oxide Sanding Belts

Our silicon carbide sanding belts are available in grits from 80–220, and packs of 2 or 10.

| <u>Grit</u> | <u>Model</u> |
|------------------------|--------------|
| 60 Grit, 10 pack..... | H3501 |
| 100 Grit, 10 pack..... | H3503 |
| 180 Grit, 10 pack..... | H3506 |

8" PSA Aluminum Oxide Sanding Discs

Our aluminum oxide sanding discs are manufactured in ISO 9002 factories to ensure the highest quality, and are available in packs of three.

| <u>Grit</u> | <u>Model</u> |
|---------------|--------------|
| 60 Grit..... | G1211 |
| 80 Grit..... | G4240 |
| 100 Grit..... | G1212 |
| 120 Grit..... | G4241 |
| 150 Grit..... | G1213 |
| 220 Grit..... | G4243 |

Call 1-800-523-4777 To Order



SECTION 6: MAINTENANCE



Schedule

For optimum performance from your machine, follow this maintenance schedule and refer to any specific instructions given in this section.

Before Each Use, Check and Correct:

- Loose mounting bolts.
- Damaged or worn sanding belt or disc.
- Worn or damaged wires.
- Any other unsafe condition.

After Each Use:

- Clean/vacuum dust buildup on tables and motor.

After 50 Hours of Use:

- Check and correct V-belt tension, damage, or wear.

Cleaning

Cleaning the Model H8192 is relatively easy. Vacuum excess sawdust, and wipe off the remaining dust with a dry cloth. Wiping the table clean after every use ensures moisture from wood dust does not remain on bare metal surfaces.

If any resin has built up, use a resin dissolving cleaner to remove it. After cleaning, treat all unpainted cast iron and steel with a non-staining lubricant with products like G96® Gun Treatment, SLIPIT®, or Boeshield® T-9.

Lubrication

Since all bearings are sealed and permanently lubricated, simply leave them alone until they need to be replaced. Do not lubricate them.

Sanding Belt Tracking

The sanding belt must track in the center of the top pulley to avoid damaging itself during use.

To adjust the sanding belt tracking:

1. Turn the sander **ON**.
2. Observe the sanding belt as it moves over the top pulley (see **Figure 31**).

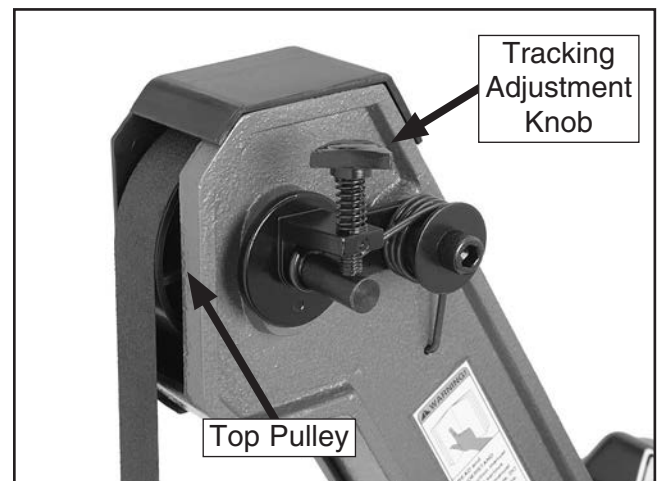


Figure 31. Sanding belt tracking adjustment.

3. Slowly adjust the tracking adjustment knob until the sanding belt tracks in the center of the top pulley.



Changing the Sanding Belt

Some sanding belts are designed to sand in only one direction and will have a direction indicated on the back of the belt. The Model H8192 is designed so that the sanding belt travels downward to the sanding table.

To change the sanding belt:

1. DISCONNECT THE SANDER FROM POWER!
2. Unscrew the two knobs from the sanding belt cover and remove the cover from the sander (see **Figure 32**).

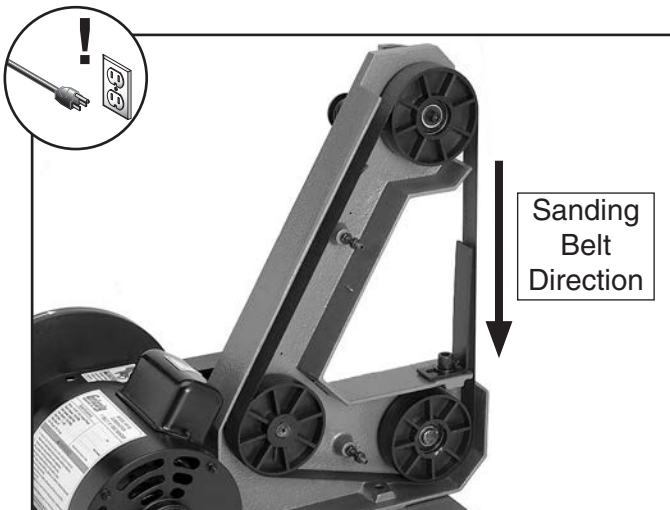


Figure 32. Sanding belt cover removed.

3. Press down firmly on the tracking adjustment knob to remove the tension from the sanding belt.
4. Roll the old sanding belt off the three pulleys, and roll the new belt back on.
5. Make sure the sanding belt is positioned in the center of all three pulleys.
6. Replace and secure the sanding belt cover.
7. Check and the adjust the sanding belt traction, as instructed on **Page 22**.

Changing the Sandpaper Disc

The Model H8192 accepts 8" diameter cloth or paper-backed pressure sensitive adhesive (PSA) sandpaper discs (refer to **Accessories** on **Page 21**).

Refer to the **Assembly** subsection, beginning on **Page 13**, for detailed instructions for some of the following steps.

To change the sanding disc:

1. DISCONNECT THE SANDER FROM POWER!
2. Remove the sanding disc table, disc dust port, and dust cover.
3. Rotate the disc until you can see the set screw through the access hole (see **Figure 33**).
4. Using the 2.5mm hex wrench through the access hole in the V-belt safety cover, loosen the set screw and remove the sanding disc.



Figure 33. Location of access hole for the sanding disc set screw.


5. Peel off the old sandpaper disc, clean the aluminum disc thoroughly, and apply the new sandpaper disc.
6. Reverse **Steps 2–4** above to reassemble your sander.



SECTION 7: SERVICE

Review the troubleshooting and procedures in this section to fix or adjust your machine if a problem develops. If you need replacement parts or you are unsure of your repair skills, then feel free to call our Technical Support at (570) 546-9663.

Troubleshooting

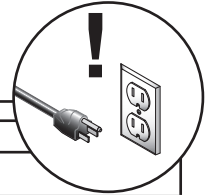

| Symptom | Possible Cause | Possible Solution |
|--|--|---|
| Motor will not start; fuses/circuit breakers trip. | <ol style="list-style-type: none"> 1. Low voltage. 2. Loose connection or short in line cord, plug, or motor. 3. Incorrect fuses or circuit breakers in power line. | <ol style="list-style-type: none"> 1. Check power line voltage and correct if necessary. 2. Inspect/repair cord, plug, and motor for damaged insulation, shorted wires, or loose connections. 3. Install correct fuses or circuit breakers. |
| Motor stalls. | <ol style="list-style-type: none"> 1. Motor overloaded. 2. Low voltage. 3. Incorrect fuses or circuit breakers in power line. | <ol style="list-style-type: none"> 1. Reduce load on motor. 2. Check power line voltage and correct if necessary. 3. Install correct fuses or circuit breakers. |
| Machine slows when operating. | <ol style="list-style-type: none"> 1. Workpiece pressure is too great. | <ol style="list-style-type: none"> 1. Reduce workpiece pressure on sanding surface. |
| Machine vibrates excessively. | <ol style="list-style-type: none"> 1. Machine not mounted securely. 2. Incorrect sanding belt tracking. 3. Weak or broken sanding belt tension spring. 4. Broken/damaged sanding belt. 5. Sanding disc rubbing, not properly centered, set screw not tight. | <ol style="list-style-type: none"> 1. Properly secure machine to benchtop/stand (Page 18). 2. Adjust sanding belt tracking (Page 22). 3. Replace spring. 4. Replace sanding belt. 5. Properly install/secure sanding disc. |
| Sanded surface not square. | <ol style="list-style-type: none"> 1. Table/miter guage not square to sanding belt/disc. | <ol style="list-style-type: none"> 1. Square table/miter guage relative to sanding belt/disc (Page 25). |
| Deep sanding grooves or scars in workpiece. | <ol style="list-style-type: none"> 1. Sandpaper damaged or clogged. 2. Sandpaper too coarse for desired finish. 3. Workpiece sanded across grain. 4. Too much sanding force on workpiece. 5. Workpiece held still against the belt/disc. | <ol style="list-style-type: none"> 1. Clean/replace sanding surface. 2. Use a finer grit sanding surface. 3. Sand with the grain. 4. Reduce pressure on workpiece while sanding. 5. Keep workpiece moving across sanding surface. |
| Sanding grains easily rub off sanding surface. | <ol style="list-style-type: none"> 1. Sanding belt/disc has been stored incorrectly. 2. Sanding surface has been damaged. | <ol style="list-style-type: none"> 1. Store sanding materials away from heat or damp conditions; store flat, not folded or bent. 2. Replace sanding material. |
| Sanding surface clogs quickly or burns. | <ol style="list-style-type: none"> 1. Too much pressure against belt/disc. 2. Sanding softwood or has paint/varnish. | <ol style="list-style-type: none"> 1. Reduce pressure on workpiece while sanding. 2. Use different stock; change/clean sanding material often. |
| Burn marks on workpiece. | <ol style="list-style-type: none"> 1. Using too fine of sanding grit. 2. Using too much pressure. 3. Work held still for too long. | <ol style="list-style-type: none"> 1. Use a coarser grit sanding belt/disc. 2. Reduce pressure on workpiece while sanding. 3. Do not keep workpiece in one place for too long. |
| Glazed sanding surfaces. | <ol style="list-style-type: none"> 1. Sanding wet stock. 2. Sanding stock with high residue. | <ol style="list-style-type: none"> 1. Dry stock proper before sanding. 2. Use different stock; change/clean sanding material often. |



Squaring Disc Table

To square the sanding disc table:

1. DISCONNECT THE SANDER FROM POWER!
2. Place a machinist's square or other 90° measuring tool against the disc table and sanding disc (see **Figure 34**).

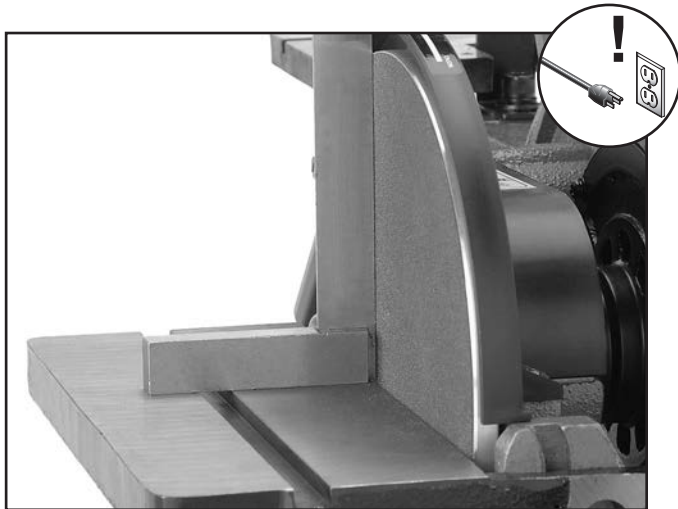


Figure 34. Using a machinist's square to adjust the sanding disc table to 90°.

3. Loosen the table lock handle, adjust the table square with the sanding disc, then re-tighten the table lock handle.
4. Loosen the Phillips head screw on the angle pointer, position the red scale pointer over the "0" mark on the angle scale, then re-tighten the screw.

Tensioning/ Replacing V-Belt

To adjust the V-belt tension:

1. DISCONNECT THE SANDER FROM POWER!
2. Remove the disc table, dust port, dust cover, and V-belt safety cover.

3. Lay the sander on its back, and loosen (but do not remove) the two cap screws securing the belt housing assembly.
4. Position the belt housing assembly so there is about ¼" V-belt deflection when moderate pressure is applied to the V-belt between the pulleys (see **Figure 10** on **Page 14**)—then fully tighten the cap screws to secure the belt housing assembly in place.
5. Check the V-belt tension and re-adjust if necessary.
6. Re-install the V-belt safety cover, dust cover, dust port, and disc table.

To replace the V-belt:

1. DISCONNECT THE SANDER FROM POWER!
2. Remove the disc table, dust port, dust cover, and V-belt safety cover.
3. Lay the sander on its back, loosen the two hex nuts securing the cast iron disc guard, and remove the disc guard (see **Figure 35**).

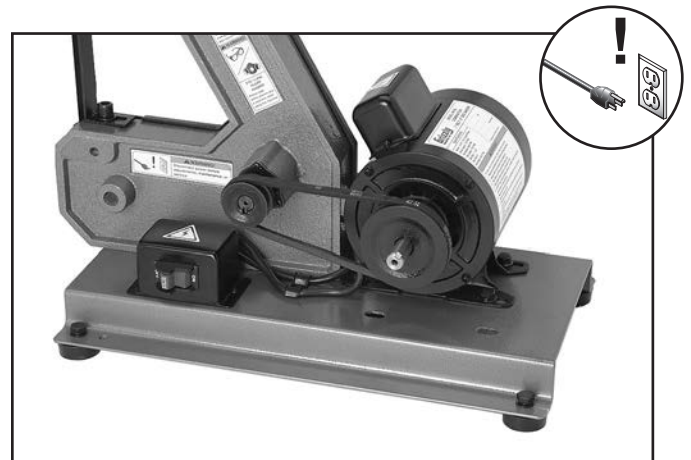


Figure 35. V-belt fully exposed.

4. Roll the old V-belt off the pulleys and roll the new one back on.
5. Re-install the disc guard, and re-adjust the V-belt tension, as described in the above subsection.
6. Re-install the V-belt safety cover, dust cover, dust port, and disc table.





Electrical Components & Wiring Diagram



⚠ DANGER
 Disconnect power before performing any electrical service. Electricity presents serious shock hazards that will result in severe personal injury and even death!


| COLOR KEY | |
|-----------|----|
| BLACK | Bk |
| WHITE | Wt |
| GREEN | Gn |

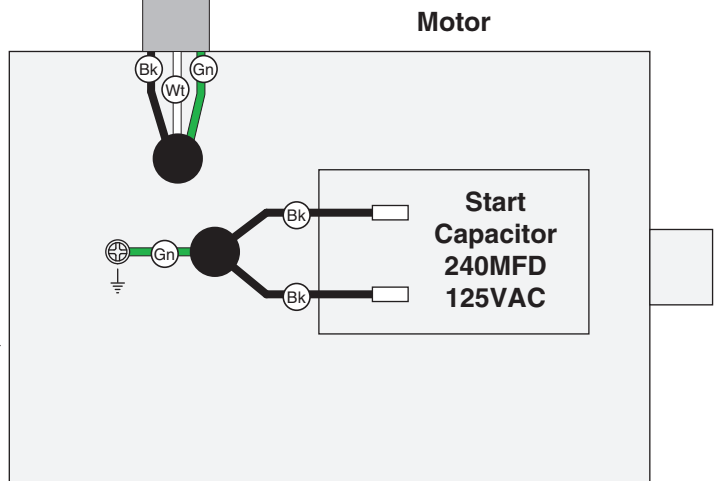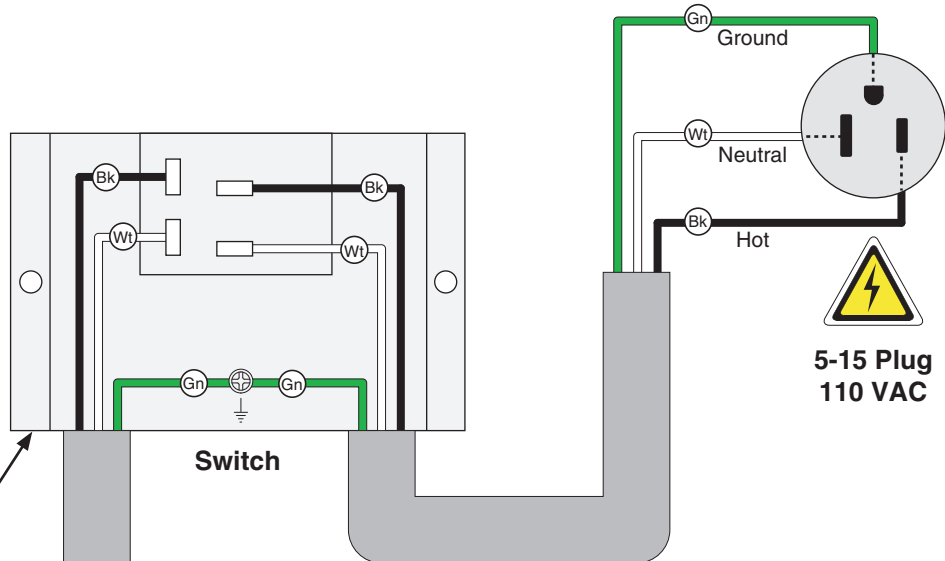


View this page in color at www.grizzly.com.



Sanding Belt & Motor Breakdown

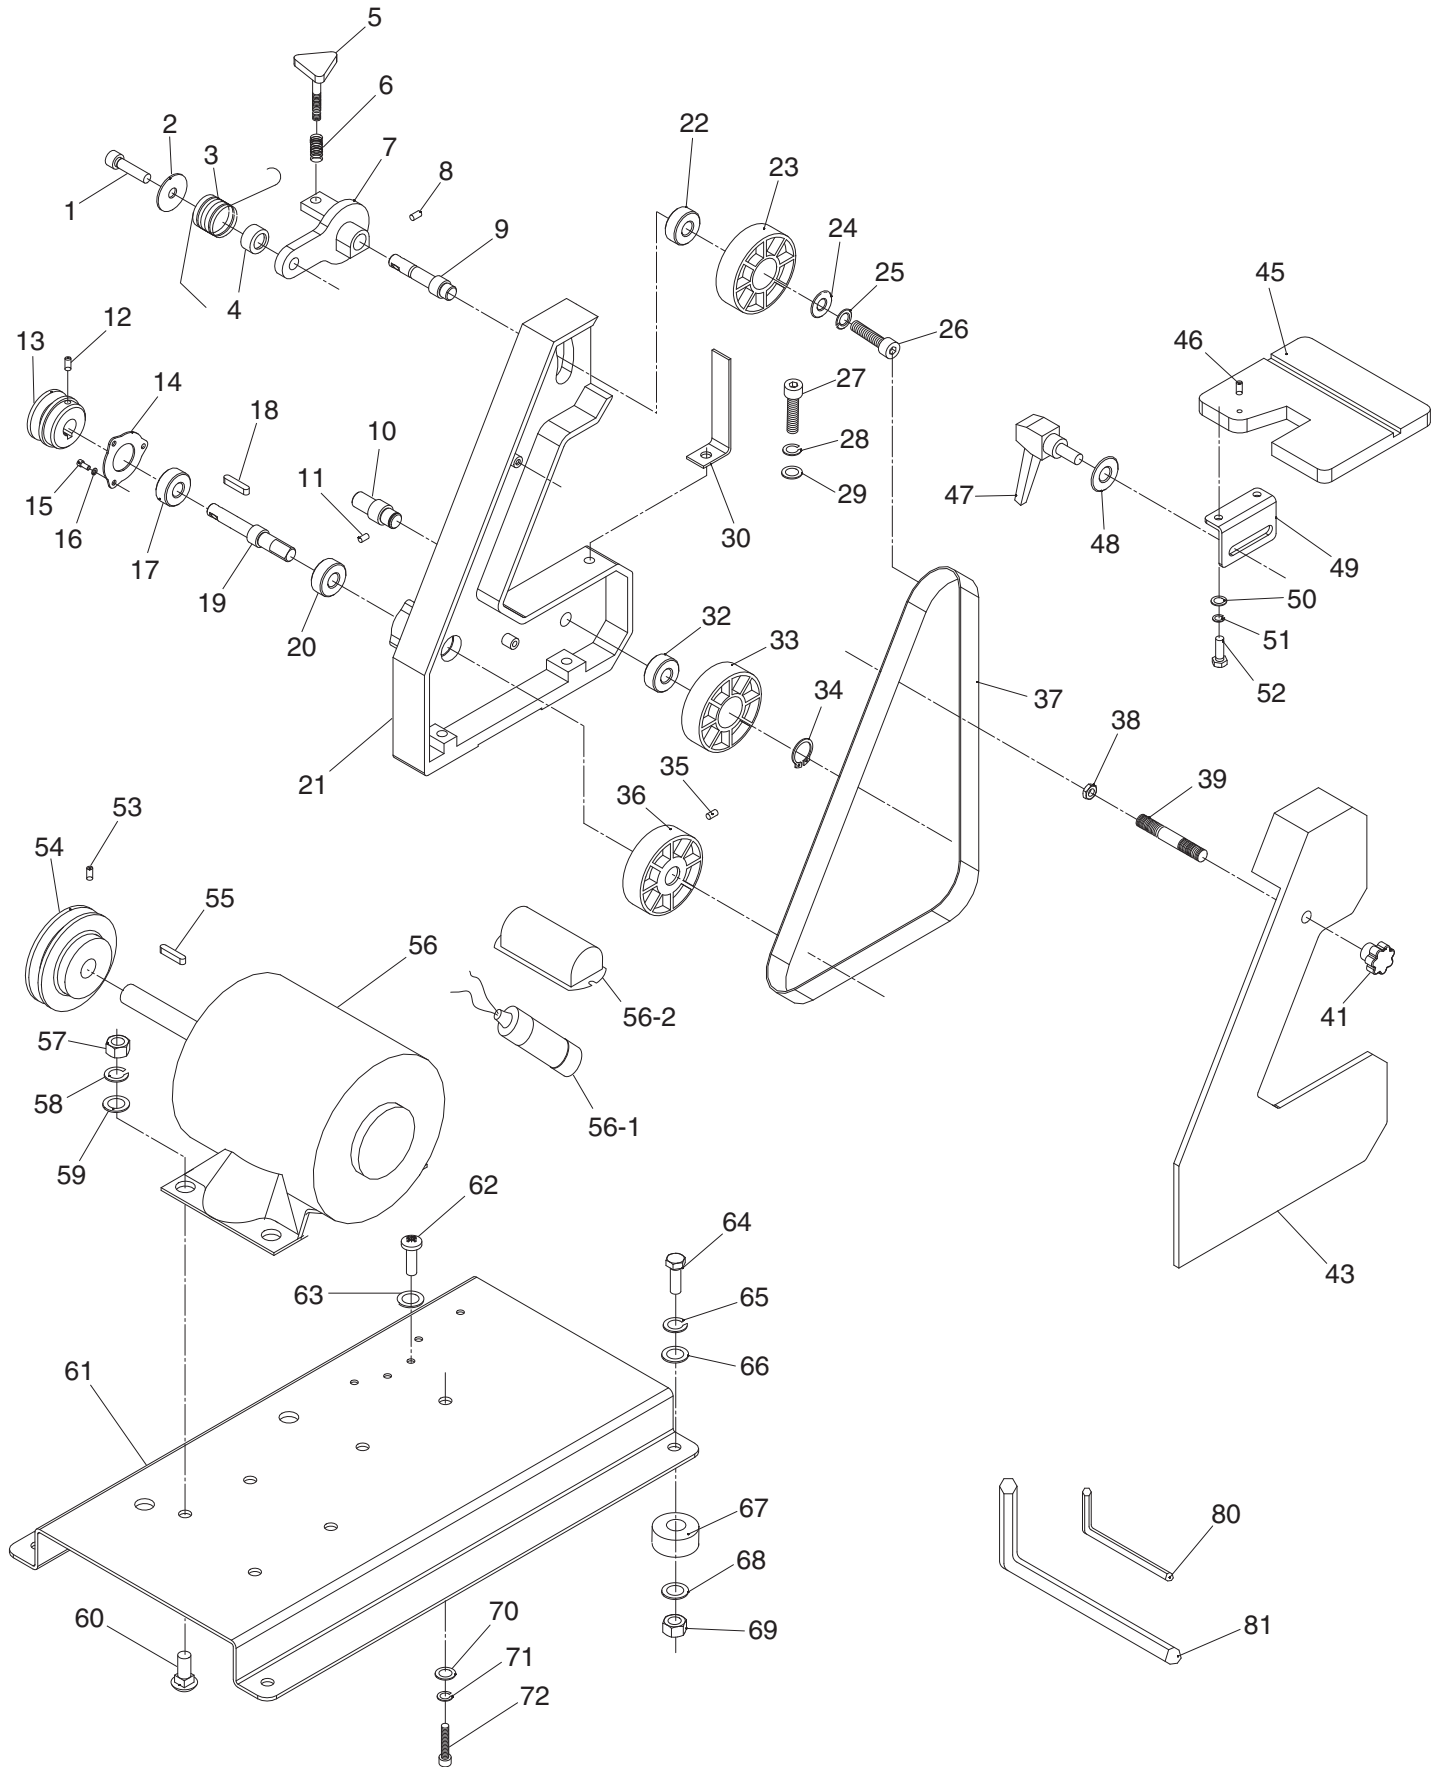

Sanding Disc Breakdown

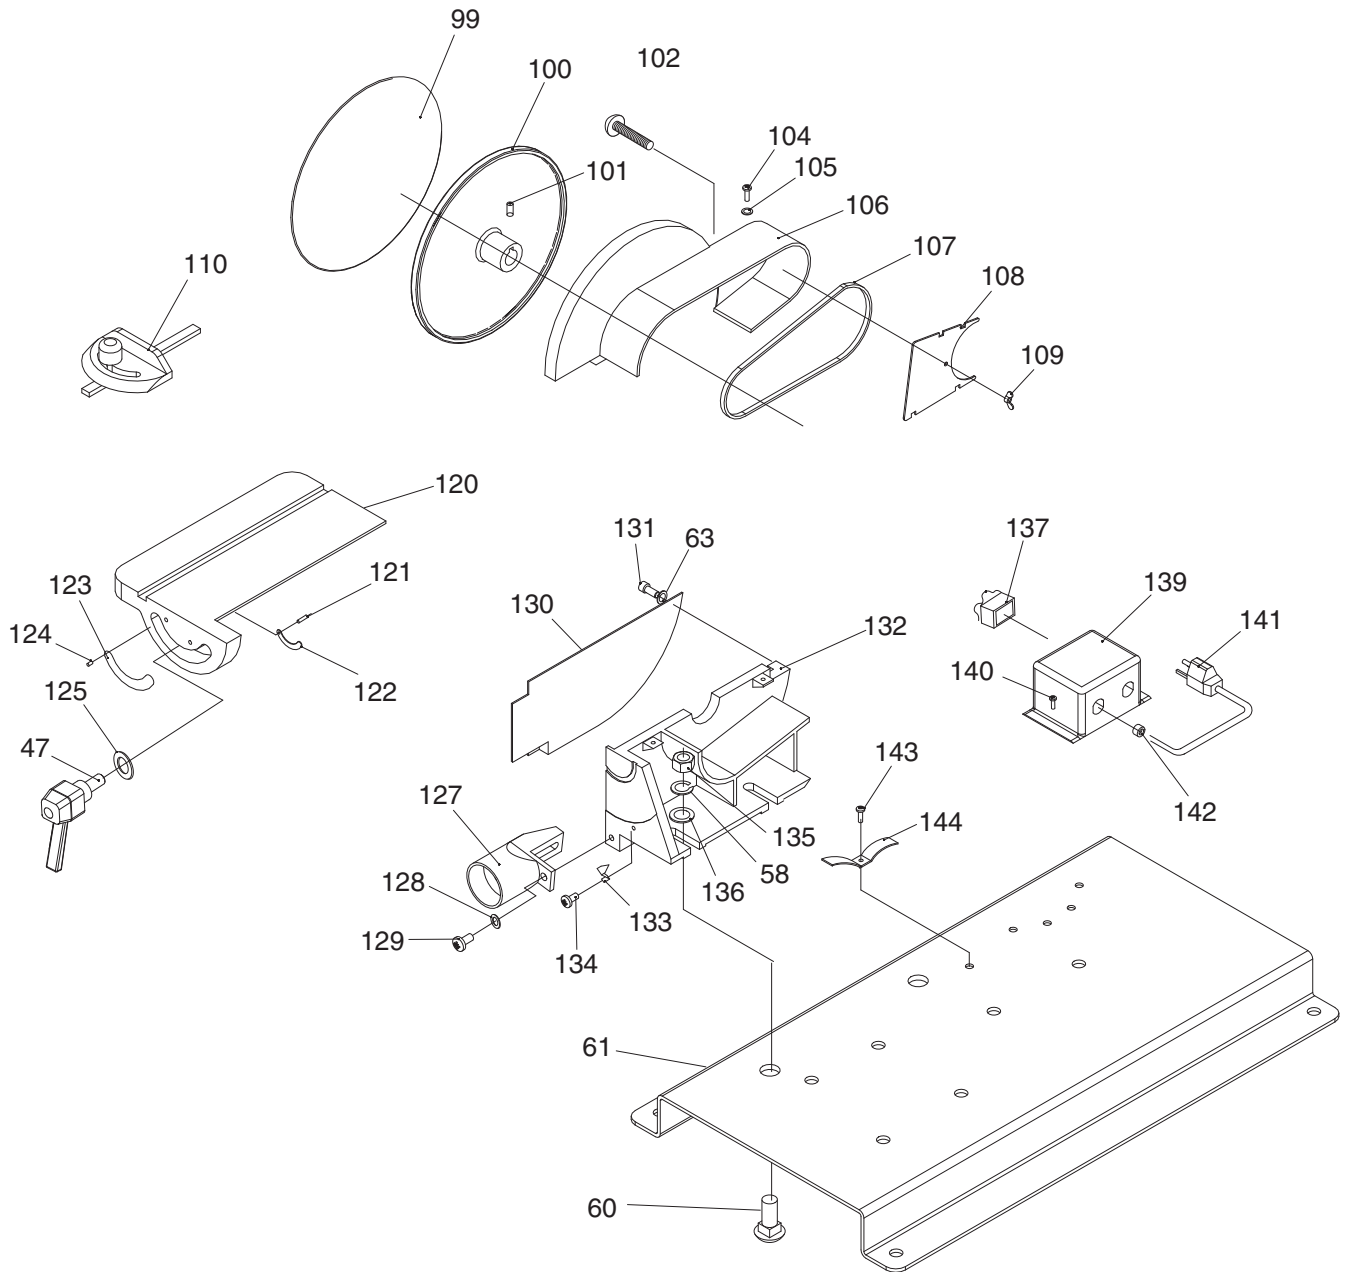


Parts List

| REF | PART # | DESCRIPTION |
|------|-------------|------------------------------|
| 1 | PSB47M | CAP SCREW M10-1.5 X 40 |
| 2 | PW04M | FLAT WASHER 10MM |
| 3 | PH8192003 | TORSION SPRING |
| 4 | PH8192004 | SPACER |
| 5 | PH8192005 | TRACKING KNOB |
| 6 | PH8192006 | COMPRESSION SPRING |
| 7 | PH8192007 | TRACKING BRACKET |
| 8 | PRP42M | ROLL PIN 3 X 20 |
| 9 | PH8192009 | SHAFT |
| 10 | PH8192010 | SHAFT |
| 11 | PSS05M | SET SCREW M5-.8 X 10 |
| 12 | PSS05M | SET SCREW M5-.8 X 10 |
| 13 | PH8192013 | BELT DRIVE PULLEY |
| 14 | PH8192014 | RETAINING PLATE |
| 15 | PS07M | PHLP HD SCR M4-.7 X 8 |
| 16 | PTLW01M | EXT TOOTH WASHER 4MM |
| 17 | P6202 | BALL BEARING 6202ZZ |
| 18 | PK23M | KEY 5 X 5 X 25 |
| 19 | PH8192019 | SHAFT |
| 20 | P6002-2RS | BALL BEARING 6002-2RS |
| 21 | PH8192021 | BELT HOUSING |
| 22 | P6202 | BALL BEARING 6202ZZ |
| 23 | PH8192023 | UPPER BELT PULLEY |
| 24 | PW03M | FLAT WASHER 6MM |
| 25 | PLW03M | LOCK WASHER 6MM |
| 26 | PSB04M | CAP SCREW M6-1 X 10 |
| 27 | PSB146M | CAP SCREW M10-1.5 X 15 |
| 28 | PLW06M | LOCK WASHER 10MM |
| 29 | PW04M | FLAT WASHER 10MM |
| 30 | PH8192030 | BELT SUPPORT |
| 32 | P6202 | BALL BEARING 6202ZZ |
| 33 | PH8192033 | MIDDLE BELT PULLEY |
| 34 | PR05M | EXT RETAINING RING 15MM |
| 35 | PSS53M | SET SCREW M5-.8 X 12 |
| 36 | PH8192036 | LOWER BELT PULLEY |
| 37 | PH8192037 | SANDING BELT 1" X 42" |
| 38 | PN01M | HEX NUT M6-1 |
| 39 | PH8192039 | THREADED STUD M6-1 X 12 |
| 41 | PH8192041 | BELT COVER KNOB |
| 43 | PH8192043 | BELT COVER |
| 45 | PH8192045 | BELT TABLE |
| 46 | PSS57M | SET SCREW M5-.8 X 20 |
| 47 | PH8192047 | TABLE LOCK |
| 48 | PW04M | FLAT WASHER 10MM |
| 49 | PH8192049 | BELT TABLE SUPPORT |
| 50 | PW04M | FLAT WASHER 10MM |
| 51 | PLW06M | LOCK WASHER 10MM |
| 52 | PB70M | HEX BOLT M10-1.5 X 16 |
| 53 | PSS05M | SET SCREW M5-.8 X 10 |
| 54 | PH8192054 | MOTOR PULLEY |
| 55 | PK112M | KEY 5 X 5 X 55 |
| 56 | PH8192056 | MOTOR 1/3HP,110V,1-PH |
| 56-1 | PH8192056-1 | START CAPACITOR 240MF 125VAC |

| REF | PART # | DESCRIPTION |
|------|-------------|----------------------------|
| 56-2 | PH8192056-2 | CAPACITOR COVER |
| 57 | PN03M | HEX NUT M8-1.25 |
| 58 | PLW04M | LOCK WASHER 8MM |
| 59 | PW01M | FLAT WASHER 8MM |
| 60 | PCB01M | CARRIAGE BOLT M8-1.25 X 20 |
| 61 | PH8192061 | BASE |
| 62 | PS07M | PHLP HD SCR M4-.7 X 8 |
| 63 | PW05M | FLAT WASHER 4MM |
| 64 | PB03M | HEX BOLT M8-1.25 X 16 |
| 65 | PLW04M | LOCK WASHER 8MM |
| 66 | PW01M | FLAT WASHER 8MM |
| 67 | PH8192067 | RUBBER FOOT |
| 68 | PW01M | FLAT WASHER 8MM |
| 69 | PN03M | HEX NUT M8-1.25 |
| 70 | PW04M | FLAT WASHER 10MM |
| 71 | PLW06M | LOCK WASHER 10MM |
| 72 | PSB64M | CAP SCREW M10-1.5 X 25 |
| 80 | PAW02.5M | HEX WRENCH 2.5MM |
| 81 | PAW08M | HEX WRENCH 8MM |
| 99 | PH8192099 | SANDING DISC 8" |
| 100 | PH8192100 | SANDING DISC PLATE 8" |
| 101 | PSS31M | SET SCREW M5-.8 X 8 |
| 102 | PS78M | PHLP HD SCR M4-.7 X 45 |
| 104 | PS07M | PHLP HD SCR M4-.7 X 8 |
| 105 | PW05M | FLAT WASHER 4MM |
| 106 | PH8192106 | V-BELT SAFETY COVER |
| 107 | PVM19 | V-BELT M-19 0580 |
| 108 | PH8192108 | V-BELT REAR COVER |
| 109 | PWN03M | WING NUT M4-.7 |
| 110 | PH8192110 | MITER GUAGE |
| 120 | PH8192120 | DISC TABLE |
| 121 | PRP78M | ROLL PIN 4 X 10 |
| 122 | PH8192122 | ARC KEY |
| 123 | PH8192123 | ANGLE SCALE |
| 124 | PH8192124 | RIVET |
| 125 | PW04M | FLAT WASHER 10MM |
| 127 | PH8192127 | DUST PORT 2" |
| 128 | PW03M | FLAT WASHER 6MM |
| 129 | PS14M | PHLP HD SCR M6-1 X 12 |
| 130 | PH8192130 | DUST COVER |
| 131 | PS07M | PHLP HD SCR M4-.7 X 8 |
| 132 | PH8192132 | DISC COVER |
| 133 | PH8192133 | POINTER |
| 134 | PS07M | PHLP HD SCR M4-.7 X 8 |
| 135 | PN02M | HEX NUT M10-1.5 |
| 136 | PW04M | FLAT WASHER 10MM |
| 137 | PH8192137 | SWITCH W/SAFETY TAB |
| 139 | PH8192139 | SWITCH COVER |
| 140 | PS07M | PHLP HD SCR M4-.7 X 8 |
| 141 | PH8192141 | POWER CORD |
| 142 | PH8192142 | STRAIN RELIEF |
| 143 | PS07M | PHLP HD SCR M4-.7 X 8 |
| 144 | PH8192144 | CLAMP |



Label Placement

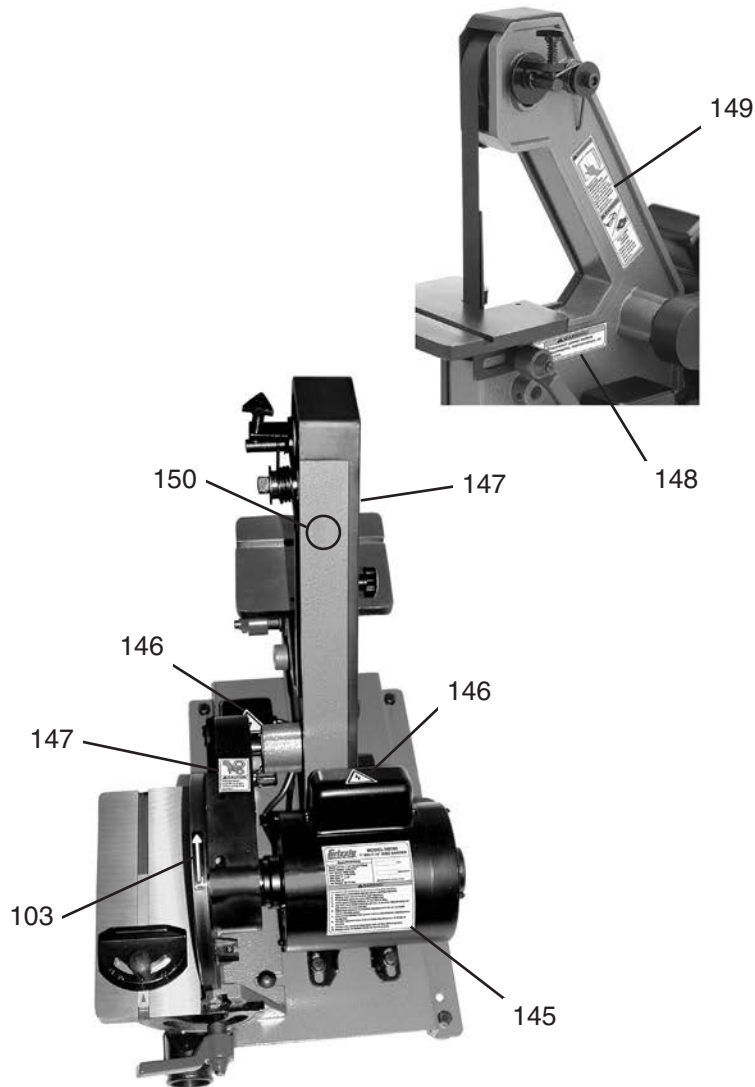

| REF | PART # | DESCRIPTION |
|-----|-----------|----------------------|
| 103 | PH8192103 | DIRECTION LABEL |
| 145 | PH8192145 | MACHINE ID LABEL |
| 146 | PLABEL-14 | ELECTRICITY LABEL |
| 147 | PH8192147 | GUARD IN PLACE LABEL |

| REF | PART # | DESCRIPTION |
|-----|-----------|----------------------------|
| 148 | PH8192148 | DISCONNECT POWER LABEL |
| 149 | PH8192149 | READ/EYE/LUNG COMBO LABEL |
| 150 | PPAINT-1 | GRIZZLY GREEN TCH/UP PAINT |

WARNING

Safety labels warn about machine hazards and ways to prevent injury. The owner of this machine **MUST** maintain the original location and readability of the labels on the machine. If any label is removed or becomes unreadable, **REPLACE** that label before using the machine again. Contact Grizzly at (800) 523-4777 or www.grizzly.com to order new labels.





WARRANTY CARD

Name _____
 Street _____
 City _____ State _____ Zip _____
 Phone # _____ Email _____ Invoice # _____
 Model # _____ Order # _____ Serial # _____

The following information is given on a voluntary basis. It will be used for marketing purposes to help us develop better products and services. **Of course, all information is strictly confidential.**

- How did you learn about us?

| | | |
|--|----------------------------------|----------------------------------|
| <input type="checkbox"/> Advertisement | <input type="checkbox"/> Friend | <input type="checkbox"/> Catalog |
| <input type="checkbox"/> Card Deck | <input type="checkbox"/> Website | <input type="checkbox"/> Other: |
- Which of the following magazines do you subscribe to?

| | | |
|---|--|---|
| <input type="checkbox"/> Cabinetmaker & FDM | <input type="checkbox"/> Popular Science | <input type="checkbox"/> Wooden Boat |
| <input type="checkbox"/> Family Handyman | <input type="checkbox"/> Popular Woodworking | <input type="checkbox"/> Woodshop News |
| <input type="checkbox"/> Hand Loader | <input type="checkbox"/> Precision Shooter | <input type="checkbox"/> Woodsmith |
| <input type="checkbox"/> Handy | <input type="checkbox"/> Projects in Metal | <input type="checkbox"/> Woodwork |
| <input type="checkbox"/> Home Shop Machinist | <input type="checkbox"/> RC Modeler | <input type="checkbox"/> Woodworker West |
| <input type="checkbox"/> Journal of Light Cont. | <input type="checkbox"/> Rifle | <input type="checkbox"/> Woodworker's Journal |
| <input type="checkbox"/> Live Steam | <input type="checkbox"/> Shop Notes | <input type="checkbox"/> Other: |
| <input type="checkbox"/> Model Airplane News | <input type="checkbox"/> Shotgun News | |
| <input type="checkbox"/> Old House Journal | <input type="checkbox"/> Today's Homeowner | |
| <input type="checkbox"/> Popular Mechanics | <input type="checkbox"/> Wood | |
- What is your annual household income?

| | | |
|--|--|--|
| <input type="checkbox"/> \$20,000-\$29,000 | <input type="checkbox"/> \$30,000-\$39,000 | <input type="checkbox"/> \$40,000-\$49,000 |
| <input type="checkbox"/> \$50,000-\$59,000 | <input type="checkbox"/> \$60,000-\$69,000 | <input type="checkbox"/> \$70,000+ |
- What is your age group?

| | | |
|--------------------------------|--------------------------------|--------------------------------|
| <input type="checkbox"/> 20-29 | <input type="checkbox"/> 30-39 | <input type="checkbox"/> 40-49 |
| <input type="checkbox"/> 50-59 | <input type="checkbox"/> 60-69 | <input type="checkbox"/> 70+ |
- How long have you been a woodworker/metalworker?

| | | | |
|------------------------------------|------------------------------------|-------------------------------------|------------------------------------|
| <input type="checkbox"/> 0-2 Years | <input type="checkbox"/> 2-8 Years | <input type="checkbox"/> 8-20 Years | <input type="checkbox"/> 20+ Years |
|------------------------------------|------------------------------------|-------------------------------------|------------------------------------|
- How many of your machines or tools are Grizzly?

| | | | |
|------------------------------|------------------------------|------------------------------|------------------------------|
| <input type="checkbox"/> 0-2 | <input type="checkbox"/> 3-5 | <input type="checkbox"/> 6-9 | <input type="checkbox"/> 10+ |
|------------------------------|------------------------------|------------------------------|------------------------------|
- Do you think your machine represents a good value? Yes No
- Would you recommend Grizzly Industrial to a friend? Yes No
- Would you allow us to use your name as a reference for Grizzly customers in your area?
Note: We never use names more than 3 times. Yes No

10. Comments: _____

CUT ALONG DOTTED LINE

FOLD ALONG DOTTED LINE



Place Stamp Here



GRIZZLY INDUSTRIAL, INC.
P.O. BOX 2069
BELLINGHAM, WA 98227-2069



FOLD ALONG DOTTED LINE

Send a Grizzly Catalog to a friend:

Name _____
Street _____
City _____ State _____ Zip _____

TAPE ALONG EDGES--PLEASE DO NOT STAPLE

WARRANTY AND RETURNS

Grizzly Industrial, Inc. warrants every product it sells for a period of **1 year** to the original purchaser from the date of purchase. This warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence, accidents, repairs or alterations or lack of maintenance. This is Grizzly's sole written warranty and any and all warranties that may be implied by law, including any merchantability or fitness, for any particular purpose, are hereby limited to the duration of this written warranty. We do not warrant or represent that the merchandise complies with the provisions of any law or acts unless the manufacturer so warrants. In no event shall Grizzly's liability under this warranty exceed the purchase price paid for the product and any legal actions brought against Grizzly shall be tried in the State of Washington, County of Whatcom.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, contact us by mail or phone and give us all the details. We will then issue you a "Return Number," which must be clearly posted on the outside as well as the inside of the carton. We will not accept any item back without this number. Proof of purchase must accompany the merchandise.

The manufacturers reserve the right to change specifications at any time because they constantly strive to achieve better quality equipment. We make every effort to ensure that our products meet high quality and durability standards and we hope you never need to use this warranty.

Please feel free to write or call us if you have any questions about the machine or the manual.

Thank you again for your business and continued support. We hope to serve you again soon.

grizzly.com[®]
TOOL WEBSITE

Buy Direct and Save with Grizzly[®] – Trusted, Proven and a Great Value!
~Since 1983~

*Visit Our Website Today For
Current Specials!*

**ORDER
24 HOURS A DAY!
1-800-523-4777**

