

FormLabs Form 2/3 SLA 3D Printer

FormLabs 3D Printer	
 A photograph of a FormLabs Form 2/3 SLA 3D printer. The printer has a black base unit with a small digital display and a grey side panel. On top of the base is a clear acrylic build plate with a black frame, and above that is a translucent orange resin bath. The printer is shown from a front-three-quarter angle.	
Tool Type:	3D printer
Location:	Innovation Workshop
Description:	Stereolithographic 3D printer
Manufacturer:	Formlabs

About

The Forms Printers are located in the Innovations Workshop with the Form 2/3 (Magnificent Ram/Caring Vischacha) in Fume Hood #2 in 2448 and another Form 2 (Electric Colt) located in 2442.

The FormLabs printers are liquid resin stereolithographic 3D printers capable of producing high resolution accurate models out of a variety of materials. Liquid resin printers use a bath of reactive resin which is precisely cured using specific wavelengths of light. This printer is particularly well suited for thin high aspect ratio features and models requiring great surface accuracy.

Based on the material and application, some prints will benefit from post process UV curing to strengthen and harden the finished part. See part curing documentation in UV FormCure reference documentation.

Both the resin cartridges and build platforms are cross compatible with both the Form 2 as well as the newer Form 3 3D printers however the build tanks are not interchangeable. Types of resins are distributed between the Form 2 and Form 3 based on frequency used as well as which benefit from the low force SLA process employed by the Form 3 and should not be swapped without consultation with the staff.

Resin expires a year after the date printed on the cartridge.

Safety Concerns

The resin used in the FormLabs 3D printers is considered hazardous. Gloves are to be worn when replacing or removing build plates, build tanks, and resin cartridges. Refer to SDS for disposal and health hazards.

Training Documentation

[Form 2/3 SOP](#)

Post-Processing

[Form Wash Cleaner](#)

[FormCure UV Curing Station](#)

Detailed Specifications

Build Volume: 14.5 x 14.5 x 17.5 cm (L x W x H)

X,Y Accuracy: ~150-ish microns

Layer Thickness: 25-300 microns

Printable Materials: Standard resin (clear or available colors), Durable resin, Flexible resin

Reference Documentation

https://support.formlabs.com/s/article/Design-Specs?language=en_US

[flexible_resin_sds_eu.pdf](#)

[formlabs_clear-sds.pdf](#)


[durable_resin_sds_eu.pdf](#)

[workshops_3d_printer_rates_112019_1_.pdf](#)

[Guide to printing with clear resin](#)

From:

<https://microfluidics.cnsi.ucsb.edu/wiki/> - **Innovation Workshop Wiki**

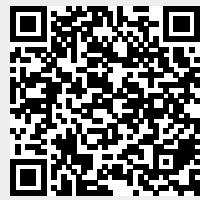

Permanent link:

<https://microfluidics.cnsi.ucsb.edu/wiki/doku.php?id=form2&rev=1672889136>

Last update: **2023/01/05 03:25**